 
 
 





## Components and Hardware List

|  |  |   |  |
|--|--|---|--|
| <p>5mm Allen Wrench</p>  <p><b>(A)</b> 1 pc.</p>  | <p>M5/16" x 1-1/2" Allen Head Bolt</p>  <p><b>(B)</b> 12 pcs.</p> | <p>5/16" Spring Washer</p>  <p><b>(C)</b> 12 pcs.</p> | <p>5/16" x 18mm Flat Washer</p>  <p><b>(D)</b> 12 pcs.</p> |
| <p>M5/16" x 5/8" Flat Head Bolt</p>  <p><b>(E)</b> 4pcs.</p> | <p>Top</p>  <p><b>(F)</b> 1 pc.</p>   | <p>Front Leg</p>  <p><b>(G)</b> 2 pcs.</p>                                 | <p>Back Leg with 2 bolt holes</p>  <p><b>(H)</b> 1 Right &amp; 1 Left</p>                   |
| <p>Middle Shelf &amp; Bottom Shelf</p>  <p><b>(I)</b> 2 pcs.</p>                                      | <p>Back Metal Cross</p>  <p><b>(J)</b> 1 pc.</p>  | <p>Anti-Tip Restraint Set</p>  <p><b>(K)</b> 1 pc.</p>                     | <p>Screw M4*50MM</p>  <p><b>(L)</b> 2 pcs.</p>   |

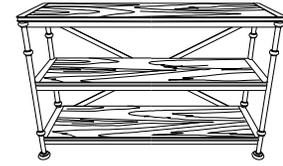

23715 Console Table

Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.

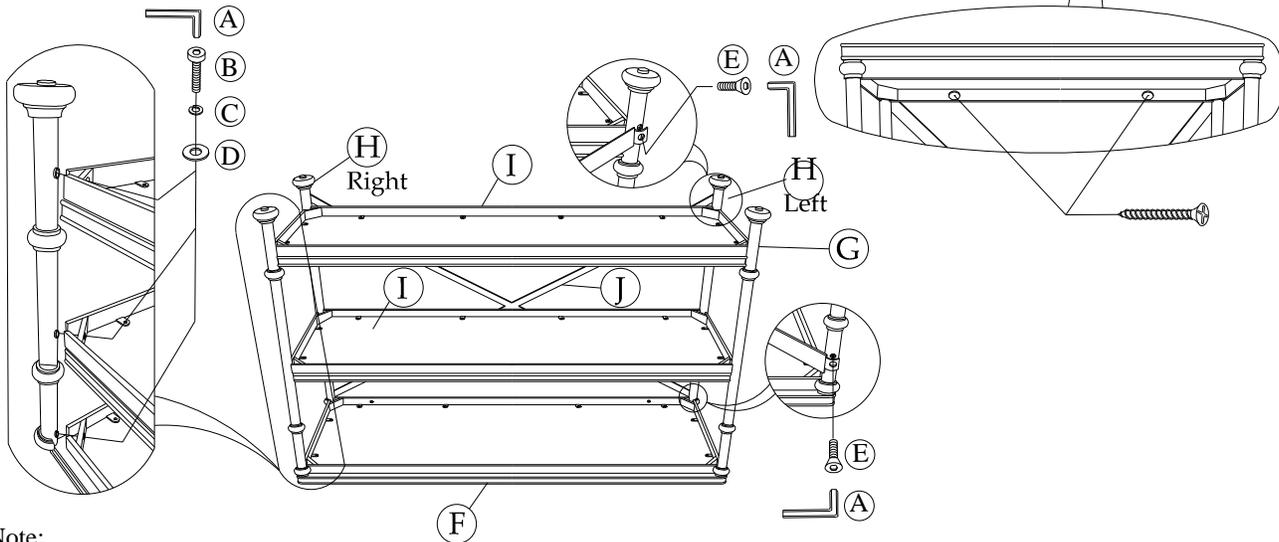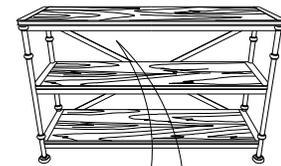

**Note:**

1. Do not discard any packing materials until the table has been completely assembled, to prevent parts from being accidentally discarded. To prevent possible scratches or damages, assemble the table upside down on a soft surface such as a blanket or carpet, or its own packaging materials.
2. Attach the two Back Legs (H) & one Front Leg (G) to the Top (F) using Flat Washers (D), Spring Washers (C) and Allen Head Bolts (B). Note: Orient each Back Leg where the two extra holes are towards the back of the Console. Do not fully tighten bolts until after Step 5.
3. Attach the Middle & Bottom Shelf (I) to the Legs using the same Washers and Bolts as in previous step. Do not fully tighten bolts until after next step.
4. Attach the second Front Leg (G) to the Top (F) & Shelves (I), using the same Washers and Bolts as in the previous steps.
6. Attach the Back Metal Cross (J) to the Back Legs using Flat Head Bolts (E).
7. Tighten all the Bolts at the corners first, using the Allen Wrench (A) and then tighten the Bolts attaching the Back Cross.
8. Carefully turn the Console upright.

There are levelers installed in the bottom of the Legs that can be adjusted to compensate for uneven flooring, if needed.


**Caution:** In order to have as stable a product as possible, this Console should be securely attached to the customer's wall. Two different attachment options have been provided for doing this, at the customer's option. Refer to next page.

Notice: Riverside Furniture Corp. recommends that steps be taken for certain furniture items to prevent or minimize the risk of tip-over. This furniture is equipped with Tip-over Restraint Hardware for use to minimize this risk, if used. Please follow below installation steps. Riverside Furniture Corp. recommends that parents and guardians periodically visit the U.S. Consumer Product Safety Commission (CPSC) website at <http://www.cpsc.gov/> and stay up to date on all issues related to children's product safety.

This Console Table should be securely attached to the wall it will be leaning against, preferably into a stud located inside the wall or using an anchor suitable for the wall material (sheet rock, plaster, etc.).

Determine approximately where the Console Table will be located and using your stud-finder or another method, locate a stud directly behind the holes in the metal frame under the back of the upper shelf, if possible. Mark the wall through the holes then temporarily move the Console Table aside, bore a 3/32 diameter pilot hole into the wall for each screw, move Console Table back into position and attach to the wall using the 2" (50mm) long Wood Screws (L) and your Phillips Screwdriver, going through the holes at the back of the metal frame underneath the Top Shelf.

Another option is to use the Anti-Tip Restraint (K) provided, attaching one metal strap to the bottom of the Top Shelf and the other metal strap to the wall, and securing with the nylon strap included. Please refer to the instructions below.

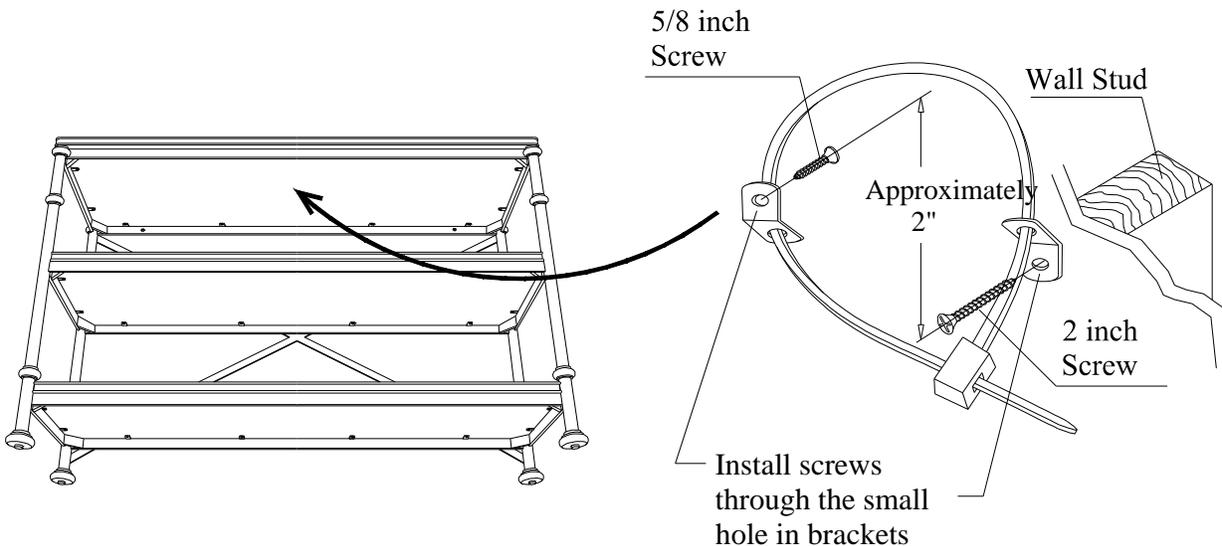

1. Temporarily locate the furniture to near its final location in the room next to a wall. Locate a wall stud behind your furniture and also mark the stud's location underneath the Top Shelf of your furniture.
2. Firmly attach one bracket to the stud approximately 1" below the Top Shelf with the **2 inch long** Wood Screws provided. It may be necessary to drill 3/32 dia. pilot holes for the screws.
3. Firmly attach the other bracket underneath the Top Shelf using the **5/8 inch long** Wood Screws.
4. Move the furniture into its final position, taking care to line up the wall bracket with the furniture bracket. Thread a strap through the bracket as shown in the illustration. Tighten strap until snug but do not over tighten.

Caution: Riverside Furniture Corp. assumes no liability for improper installation or excessive loads placed on screws, brackets or straps. Failure to detach this restraint before moving furniture may result in personal injury and property damage.

Warning: This tip-over restraint is not to be a substitute for proper adult supervision. Do not allow children to climb on furniture. Items left on top of the TV and furniture, such as toys, remote controls and treats might tempt young children to climb. Push the TV as far back as possible from the front of its stand. Place electrical cords out of a child's reach, and teach children not to play with the cords.