



Product No.	Product Description
42840	Console
42848	Left Pier
42849	Right Pier
42843	Bridge & Back Panel

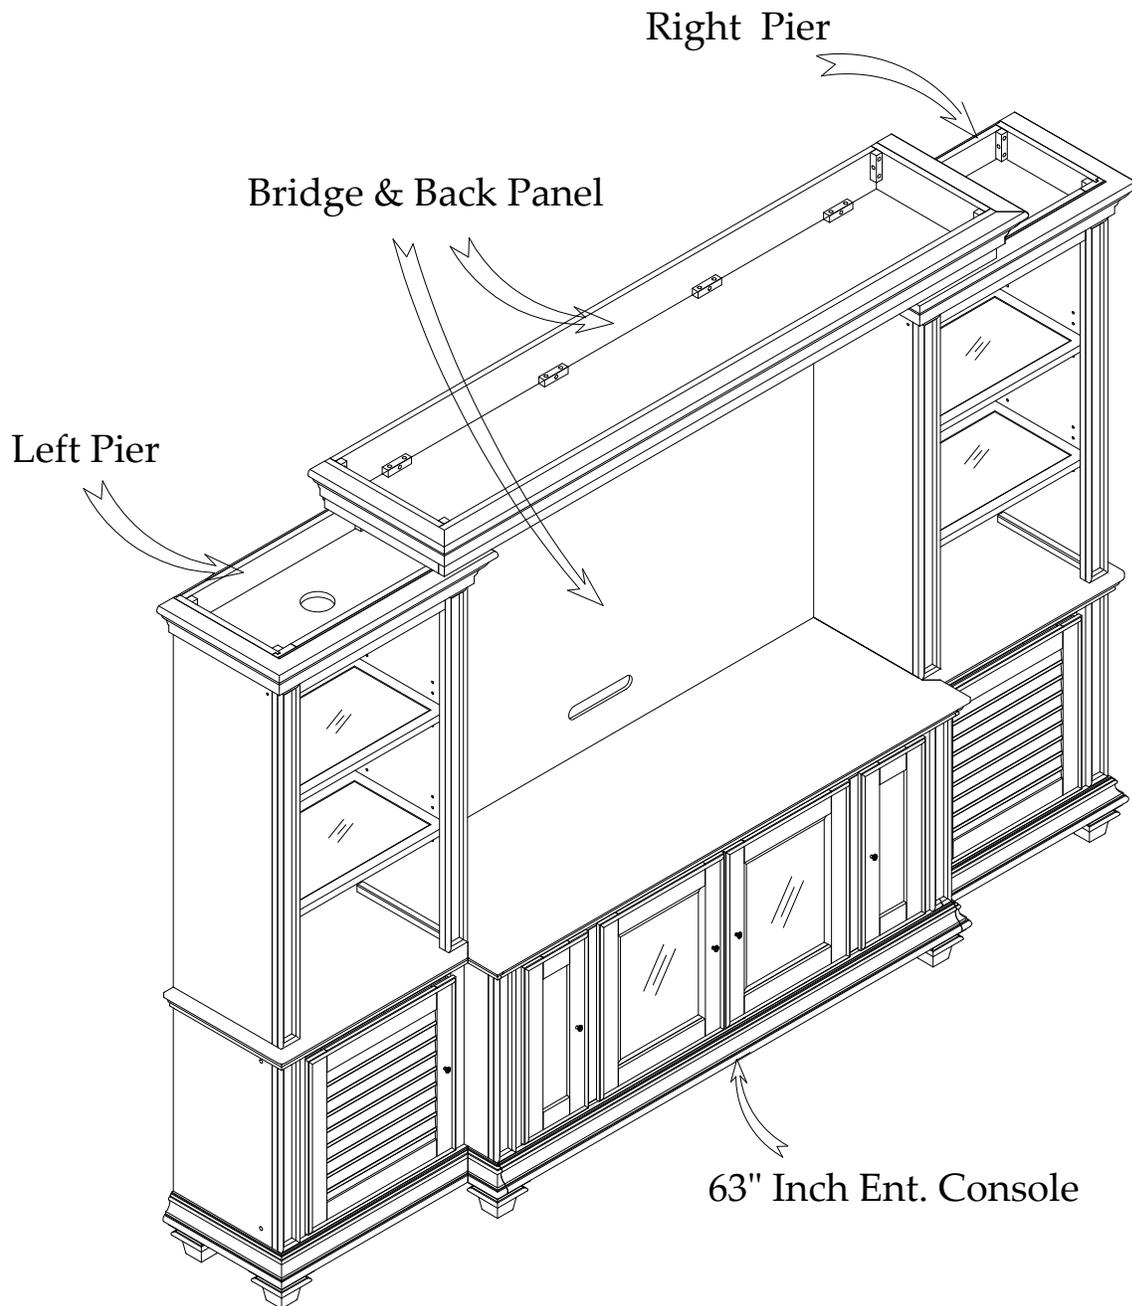

Components and Hardware List

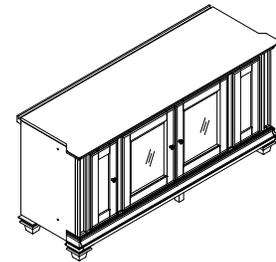

42840 TV Console


<p>Bun Foot</p> <p>(A) 4 pcs.</p>	<p>3/8" x 2-1/4 Long All-Thread Bolt</p> <p>(B) 4 pcs.</p>	<p>Middle Wood Shelf</p> <p>(C)</p>	<p>Side Wood Shelf</p> <p>(D) 2 pcs.</p>	<p>Center Support Leg</p> <p>(E) 1 pc.</p>	
<p>Leveler</p> <p>(F) 5 pcs.</p>	<p>Top End Moulding (Left and Right)</p> <p>(G) 2 pcs.</p>	<p>Base End Moulding (Left and Right)</p> <p>(H) 2 pcs.</p>	<p>Back Panel Support Rail (installed)</p> <p>(I) 1 pc.</p>	<p>Wood Screw (installed)</p> <p>(J) 6 pcs.</p>	<p>Shelf Pin</p> <p>(K) 12 pcs.</p>
<p>Anti-tipping Restraint</p> <p>(M) 2 pcs.</p>	<p>Wood Plug</p> <p>(N) 4 pcs.</p>				

Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.

ASSEMBLY STEPS:


- Carefully place the Console on its back on a soft, clean surface.
- Install the All-Thread Bolts (B) into the top of the Bun Feet (A). Assemble the Bun Feet into the spring-backed connectors under the bottom corners as shown. When the Bun Feet feels snug, you will be able to continue tightening until the interior spring becomes compressed fully, allowing the Bun Feet to be aligned or adjusted under the console base.
- Assemble the Support Leg (D) underneath the middle of the Console as shown.
- Using two people, carefully set the Console upright.

There is a leveler located in the bottom of the Bun Feet and Center Support Leg which can be adjusted to compensate for uneven flooring if needed.

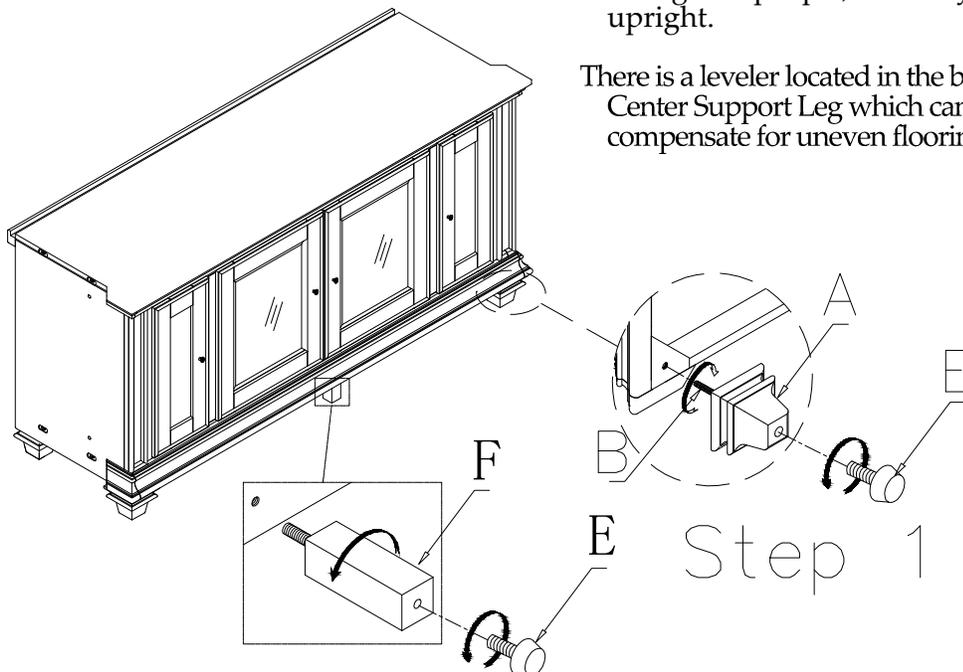

Step 3


Step 1

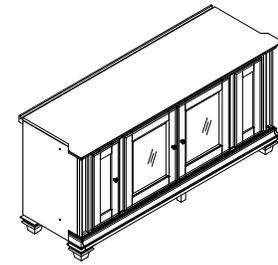




42840 TV Console

ASSEMBLY STEPS:

5. Insert the Shelf Pins (I) into the holes in the side panels at the desired level and place the Shelves (C) & (D) on them as shown.
6. If the TV Console is used alone, attach the Top and Base End Mouldings (G & H) by mating the connectors and sliding the mouldings toward the front of the Console until in place. Install the Wood Plugs (N) by pressing into the holes on each end of the Console.
7. If the TV Console is used alone and if desired, the Back Panel Support Rail (I) can also be removed from the back of the Console using your Phillips Screwdriver. It is recommended that the Rail and Screws be stored with the Console for possible future use.
8. If the Pier Cabinets, Bridge and Back Panel are used with the TV Console it is recommended that the Wood Plugs and End Wood Mouldings be stored with the Console for possible future use.

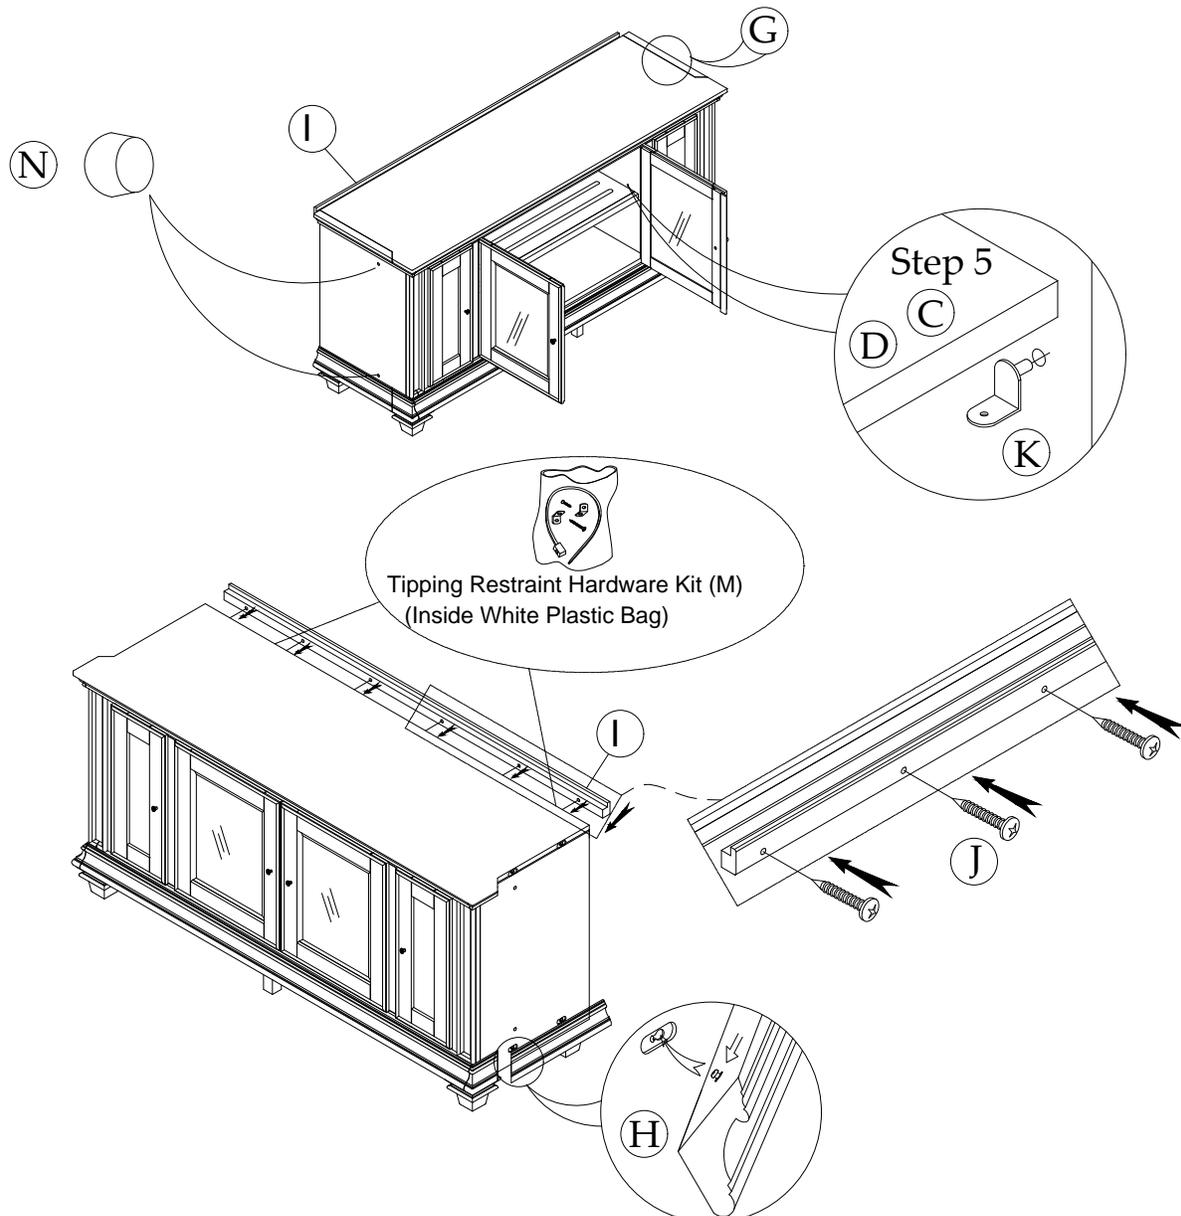


Components and Hardware List
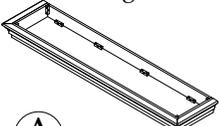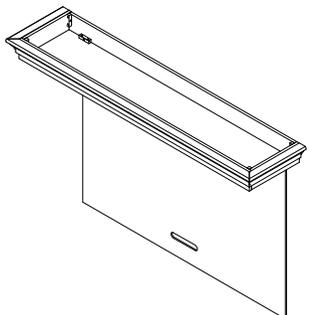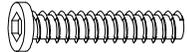
<p>Bridge</p>  <p>A 1 pc.</p>	<p>Side Back Panel</p>  <p>B 2 pcs.</p>	<p>Middle Back Panel</p>  <p>C 1 pc.</p>	 <p>42843 Bridge & Back Panel</p>		
<p>M1/4"-20 x 1-1/2" Long Allen Head Bolt</p>  <p>D 6 pcs.</p>	<p>M1/4" Spring Washer</p>  <p>E 6 pcs.</p>	<p>M1/4"*16*2mm Flat Washer</p>  <p>F 6 pcs.</p>	<p>4mm Allen Wrench</p>  <p>G 1 pc.</p>	<p>Wood Screw #6 x 5/8"</p>  <p>H 2 pcs.</p>	<p>Mending plates (attached)</p>  <p>I 2 pcs.</p>

Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.

ASSEMBLY STEPS:

1. Connect the Side Back Panels (B) to the Middle Back Panel (C) using the Allen Head Bolts (D), Spring Washers (E) and Flat Washers (F). Check to make sure the ends of the Side Back Panels are flush, or even to the ends of the Middle Back Panel before fully tightening the bolts with the Allen Wrench (G).

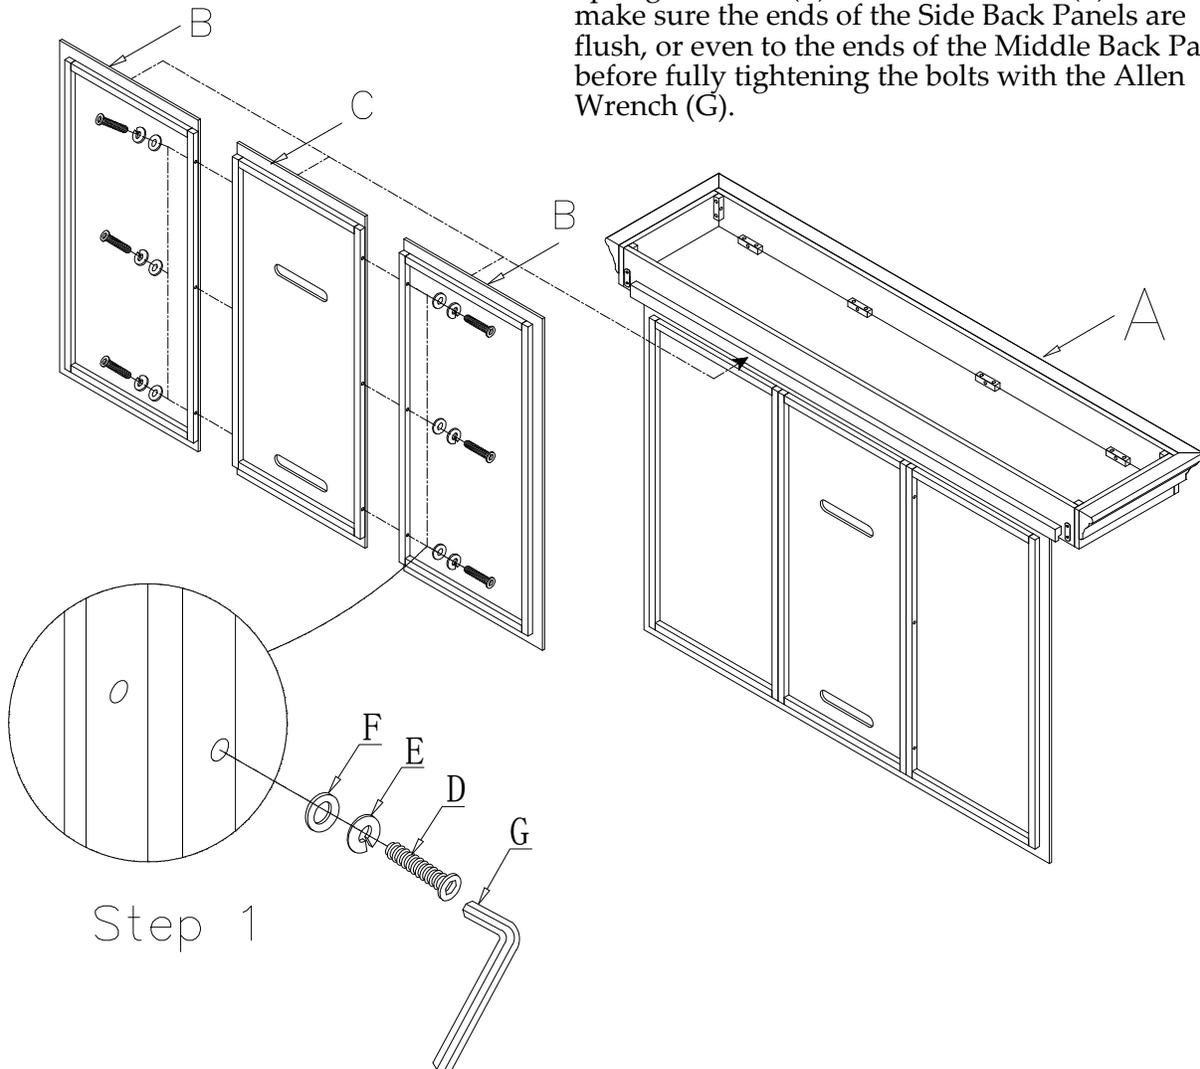


Components and Hardware List

Bun Foot <p>(A) 2 pcs.</p>	3/8" x 2-1/4" Long All-Thread Bolt <p>(B) 2 pcs.</p>	Leveler <p>(C) 3 pcs.</p>	M1/4"-20 x 1-1/4" Long Allen Head Bolt <p>(D) 2 pcs.</p>
Connector Nut <p>(E) 2 pcs.</p>	4mm Allen Wrench <p>(F) 1 pc.</p>	Shelf Pin <p>(G) 12 pcs.</p>	Wood Shelf <p>(H) 1 pc.</p>
Wood Frame Shelf <p>(I) 2 pcs.</p>	Glass Panel <p>(J) 2 pcs.</p>	Support Leg <p>(K) 1 pc.</p>	Tipping Restraint Kit <p>(M) 1 pc.</p>

Left-Hand
Media Pier

Right-Hand
Media Pier

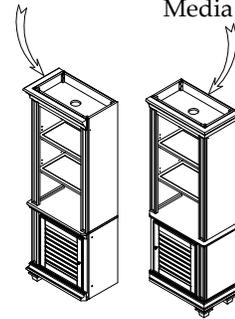


42848 Left Pier
42849 Right Pier

Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.

ASSEMBLY STEPS:

- Carefully place the Pier Cabinet on its back on a soft, clean surface.
- Install the All-Thread Bolts (B) into the top of the Bun Feet (A). Assemble the Bun Feet into the spring-backed connectors under the bottom outside corners as shown. When the Bun Feet feels snug, you will be able to continue tightening until the interior spring becomes compressed fully, allowing the Bun Feet to be aligned or adjusted to be straight, under the Pier base.
- Assemble the Support Leg (D) underneath the inside corner of the cabinet as shown.
- Using two people, carefully set the Pier Cabinet upright.

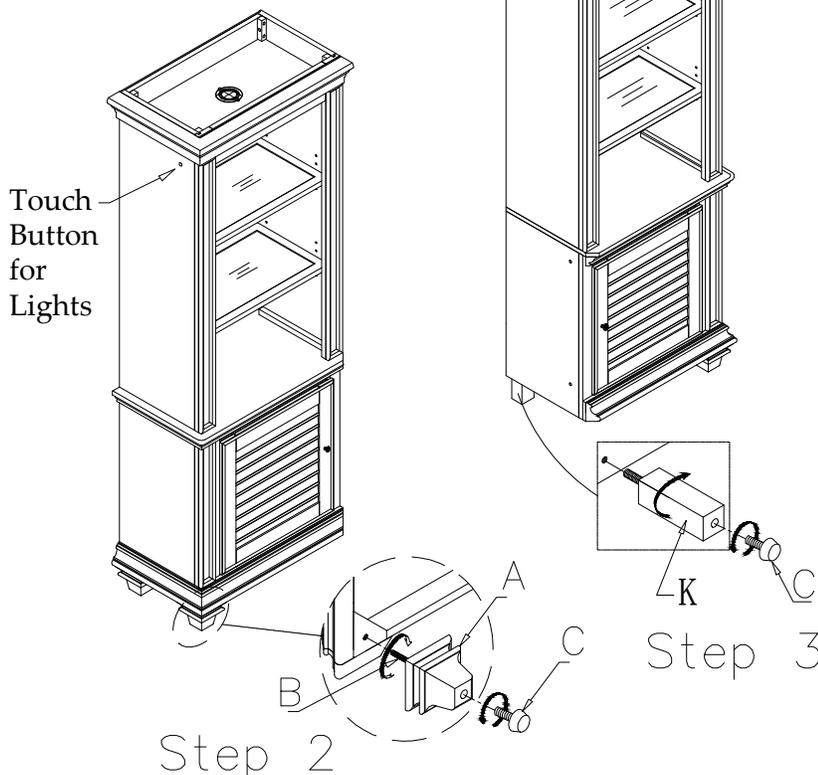

There is a leveler located in the bottom of the Bun Feet and Center Support Leg which can be adjusted to compensate for uneven flooring if needed.


WARNING!!!

RISK OF FIRE / INJURY / BURN TO PERSONS / PROPERTY.
KEEP COMBUSTIBLES AWAY FROM LIGHTING FIXTURE.
TURN OFF / UNPLUG TO CHANGE BULB. DO NOT
TOUCH HOT BULB. DO NOT OPERATE LIGHT IF
DAMAGED.

Use only the same type of replacement bulbs and with
maximum wattage rating as indicated on the bulb and in the
lighting fixture.

The lights are controlled by a touch button that is mounted on
the outside end panel of the Left Hand Pier Cabinet.

Left-Hand
Media Pier

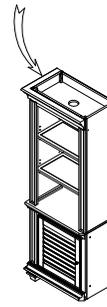

Right-Hand
Media Pier



42848 Left Pier


42849 Right Pier

Note:

The steps shown below for the Pier Cabinets should be performed only after the entire
Wall System has been completely set up and assembled together.

Step 4: After the TV Console has been moved to near its final location in the room and
the Left and Right Pier cabinets are connected to the TV Console, insert Shelf Pins (G)
into the holes in the side panels at the desired locations, then place Wood Shelf (H) or
Wood Frame Shelf (I) on the shelf pins.


Step 5: Place the Glass Panel (J) into Wood Frame Shelf.

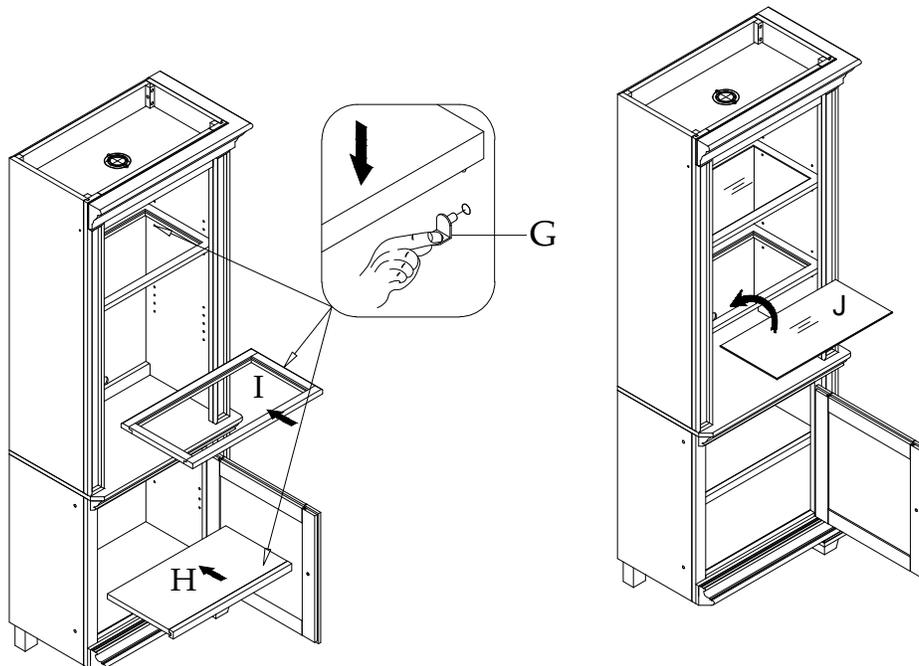

Step 6: After the TV Console has been moved to its final location in the room connect the Left and Right Pier cabinets using the 1/4" Allen Head Bolts (D) through the side panel of the Pier Cabinet and the Connector Nut (E) on the inside of the TV Console. Adjust the cabinets to remove any open cracks between the units and tighten the Bolts using the 4mm Allen Wrench (F).


Left-Hand
Media Pier

Right-Hand
Media Pier

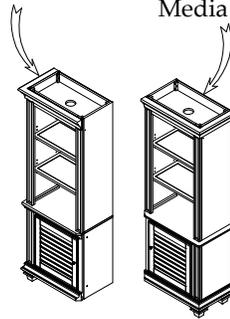


42848 Left Pier

42849 Right Pier

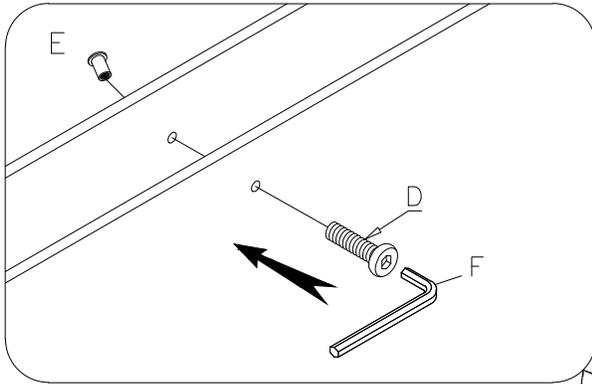


Step 4

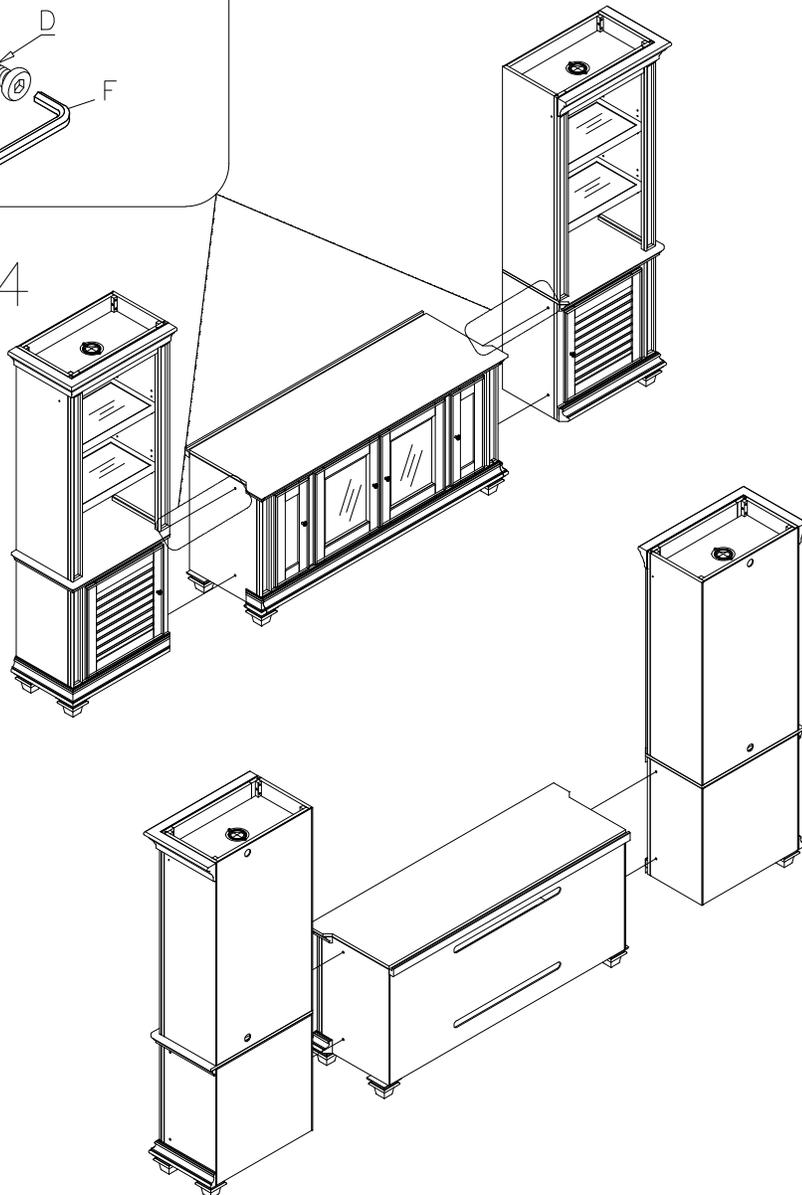


Step 5: Using two people, carefully place the Bridge, centered, on top of the Left and Right Pier Cabinets. Check the location at the back to where the Back Panel can be inserted into the channel molding on the back edge of the Bridge and TV Console.

Step 5

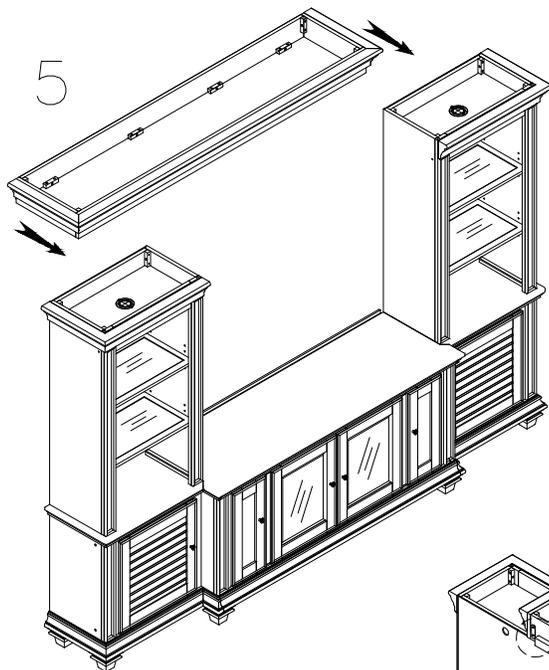

Left-Hand
Media Pier

Right-Hand
Media Pier

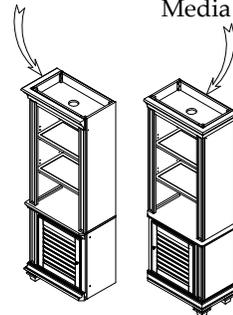


42848 Left Pier

42849 Right Pier


Step 6: Using two people, carefully install the assembled Back Panels into the channel molding on the back edge of the Bridge and TV Console.

Step 7: After the back panels are in place, pivot the Mending Plate down onto the back of the Pier Cabinet. Using your Philips screwdriver, install the screw through the mending plate into the back of the Pier Cabinet, securing the units together. Repeat for the other end of Bridge.

Step 7

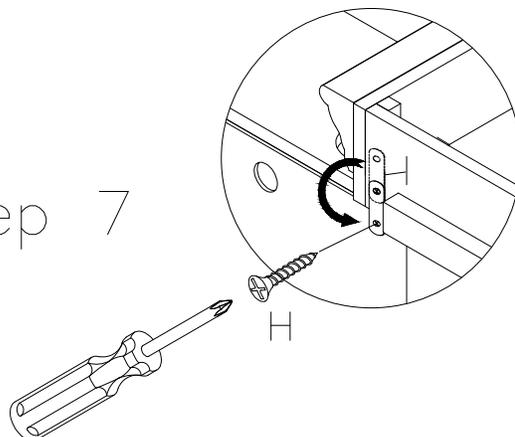


Step 6

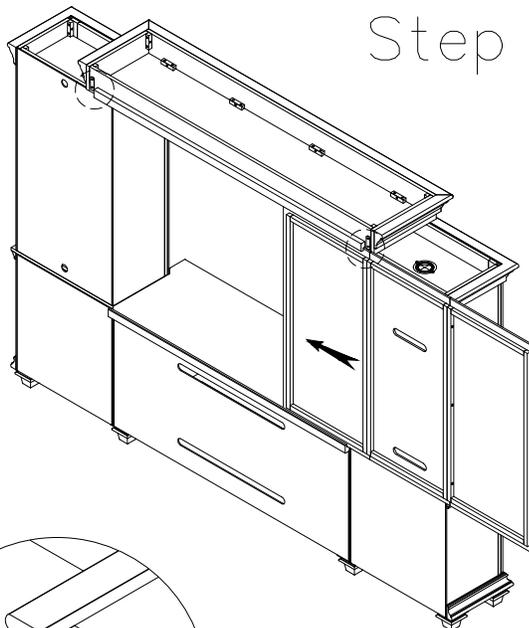

If certain pieces of furniture are misused or abused, the possibility exists that they might tip over. Tip-over restraints, installed correctly, can help to reduce that risk. Please refer to the instructions printed on the following page for proper installation instructions.


The lights in the top of both Pier Cabinets are controlled by the Touch Button mounted on the Outside End Panel of the Left Hand Pier, which must also connect to the touch switch, mounted in the top of the Left Hand Pier Cabinet. The light in the top of the Right Hand Pier Cabinet must also be connected to the female cord of the light in the top of the Left Pier Cabinet. After connecting the lights to an active wall outlet, if the lights will not operate, please refer to the troubleshooting guide on the following pages.


Left-Hand Media Pier Right-Hand Media Pier

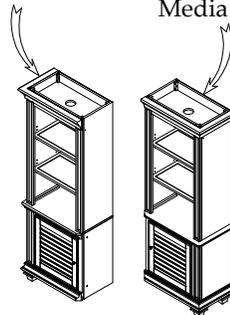

42848 Left Pier
42849 Right Pier

The cord from the light in the Right Hand Pier Cabinet must be connected to the light in the Left Hand Pier Cabinet.

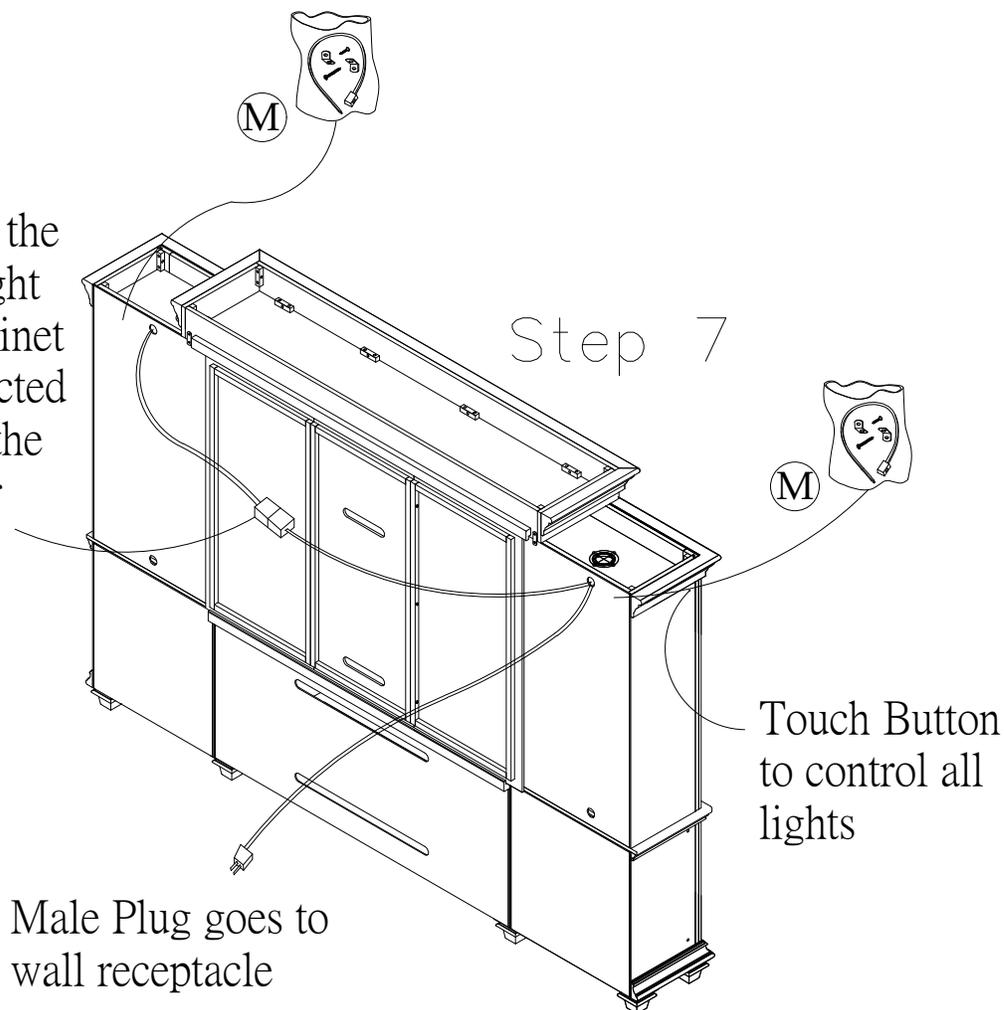

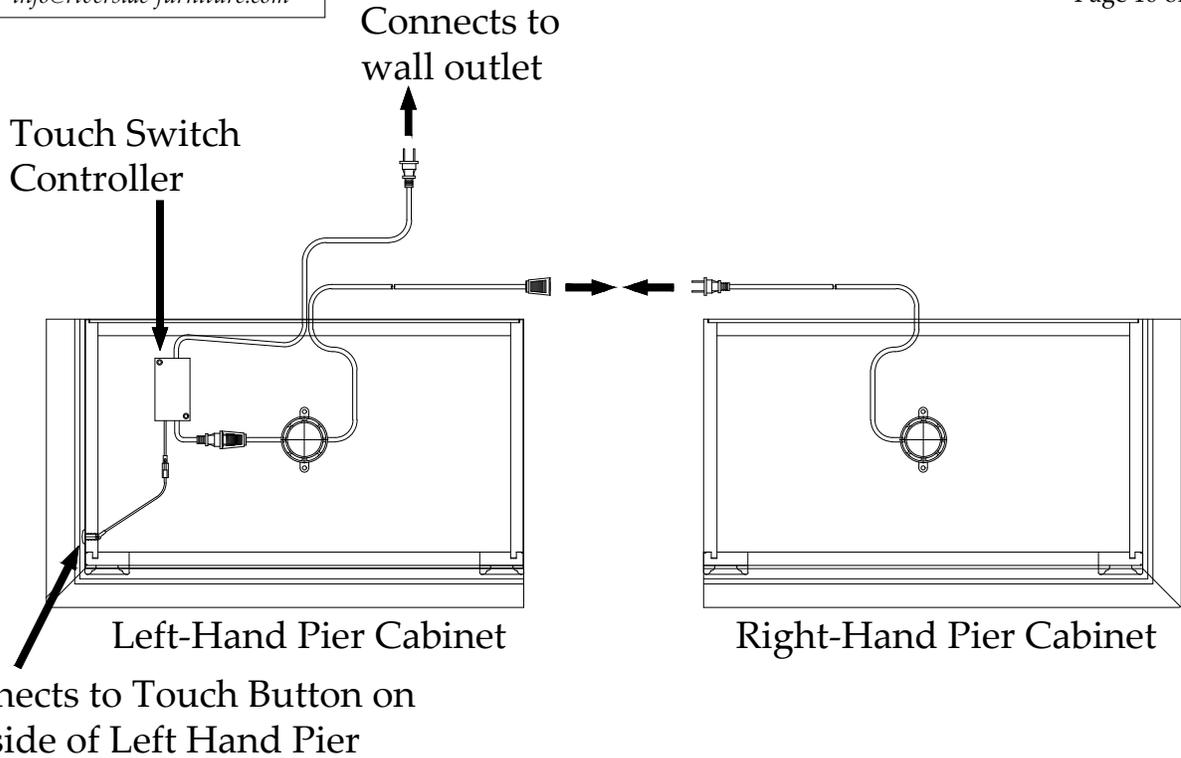

WARNING!!!

RISK OF FIRE / INJURY / BURN TO PERSONS / PROPERTY. KEEP COMBUSTIBLES AWAY FROM LIGHTING FIXTURE. TURN OFF / UNPLUG TO CHANGE BULB. DO NOT TOUCH HOT BULB. DO NOT OPERATE LIGHT IF DAMAGED.

Use only the same type of replacement bulbs and with maximum wattage rating as indicated on the old bulb or on the lighting fixture.

Before replacing halogen puck light bulb, unplug power cord from wall outlet to remove power to fixture.

To replace bulb, twist lens cover counter-clockwise and lift off cover to remove.



Grasp old bulb and pull straight out of socket.

Install new bulb by inserting pins firmly and fully back into socket. DO NOT TOUCH NEW BULB WITH BARE FINGERS.

Please see instructions.

Replace lens cover back on fixture and lock in position by twisting cover clockwise.

To remove lens cover

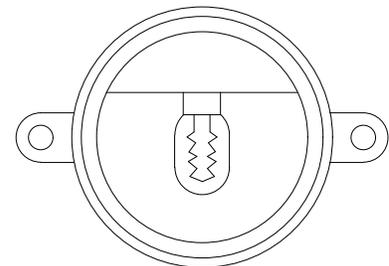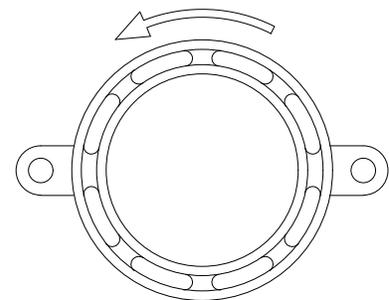

email: info@riverside-furniture.com

As the first step in you receiving a quality product, all lighting and electrical products installed in your furniture are checked at the factory before the furniture is packaged. Occasionally however, some connections do not stay firmly intact or other problems develop and the lights do fail to operate. To troubleshoot non-functioning electrical problems follow the steps listed below.

1. Beginning with the most obvious, make sure you have the electrical cord plugged into a working electrical outlet. If there is a wall switch that controls the electrical outlet the light is plugged into, be sure it is turned on.
2. Do any of the lights in your furniture work?
3. Locate the light switch and make sure it is turned on. We use different types of switches to control the lighting in our furniture; a push button, twist knob on-off with dimmer, or a touch switch on-off with dimmer.
4. A: If a Push Switch is used, look for a small push button on-off switch, normally extending through the bottom side of the top panel of the furniture. Push on, Push off.
B: If a Twist Knob Switch is used, look for a small twist knob, normally extending through the bottom side of the top panel of the furniture. Twist on one direction, Twist the other direction for off.
C: If your cabinet is equipped with a three-stage Touch Switch, there may be a wire attached to a top door hinge, which is the touch point for the light. There could also be a metal button or other metal object normally mounted to the bottom side of the top panel, which could be the touch point for the light. The first three touches bring the light to low, medium, and high brightness. Touching the fourth time will turn the light off.
5. Be sure the light fixture is plugged into the switch mechanism. Usually this wiring is concealed in the top of the furniture. On touch dimmers, there is also a wire that goes to the hinge or touch button. Be sure it is connected to the switch box and to the touch point and if there is a connection between the hinge or touch button and switch box, make sure it is firmly connected together.
6. If the furniture has more than one light, verify that all the lights are connected.
7. Check sockets for damage and be sure the bulbs are installed properly. Test bulbs to see if they are good. See the precautions below for Halogen Bulbs. If the bulbs are bad, replace bulbs. Never use a bulb with a higher wattage than the fixture is designed for as indicated on a label or stamped onto the fixture.
8. In almost all instances if it is not the bulb, the problem is a malfunctioning switch or dimmer. Replace the switch or dimmer as required by the case.

Some of the lighting in our furniture is "hardwired together" meaning all connections are made at the factory and enclosed within the light fixture or within the switch box, etc. and are not consumer accessible or repairable. Sometimes the different components (lights or switches) use insulated connectors that are pushed or plugged into each other and are consumer accessible and can be checked if needed. If these are not firmly connected together this could cause a light not to function. All connectors should be checked to verify they are firmly connected.

Handling Precautions of Halogen Bulbs


Any surface contamination, notably fingerprints, can damage the halogen bulb when it is heated. Contaminants will create a hot spot on the glass bulb surface when the bulb is turned on. Consequently, manufacturers recommend that halogen lamps should be handled without touching the clear glass, either by using a clean paper towel, cotton gloves or carefully holding the porcelain base. If the glass is contaminated in any way, it must be thoroughly cleaned with rubbing alcohol and dried before use.

Safety of Halogen Bulbs

Halogen lamps get hotter than regular incandescent lamps because the heat is concentrated on a smaller bulb surface, and because the surface is closer to the filament. This high temperature is essential to their operation. Because the halogen lamp operates at very high temperatures, it can pose fire and burn hazards. Never operate a halogen lamp without the fixture's lens in place to prevent accidental burns or ignition of flammable objects coming into contact with the bulb, and to reduce the UV radiation exposure from the burning lamp.

Replacement bulbs are available at most home improvement or hardware stores.

Notice: Riverside Furniture Corp. recommends that steps be taken for certain furniture items to prevent or minimize the risk of tip-over. This furniture is equipped with Tip-over Restraint Hardware for use to minimize this risk, if used. Please follow below installation steps. Riverside Furniture Corp. recommends that parents and guardians periodically visit the U.S. Consumer Product Safety Commission (CPSC) website at <http://www.cpsc.gov/> and stay up to date on all issues related to children's product safety.

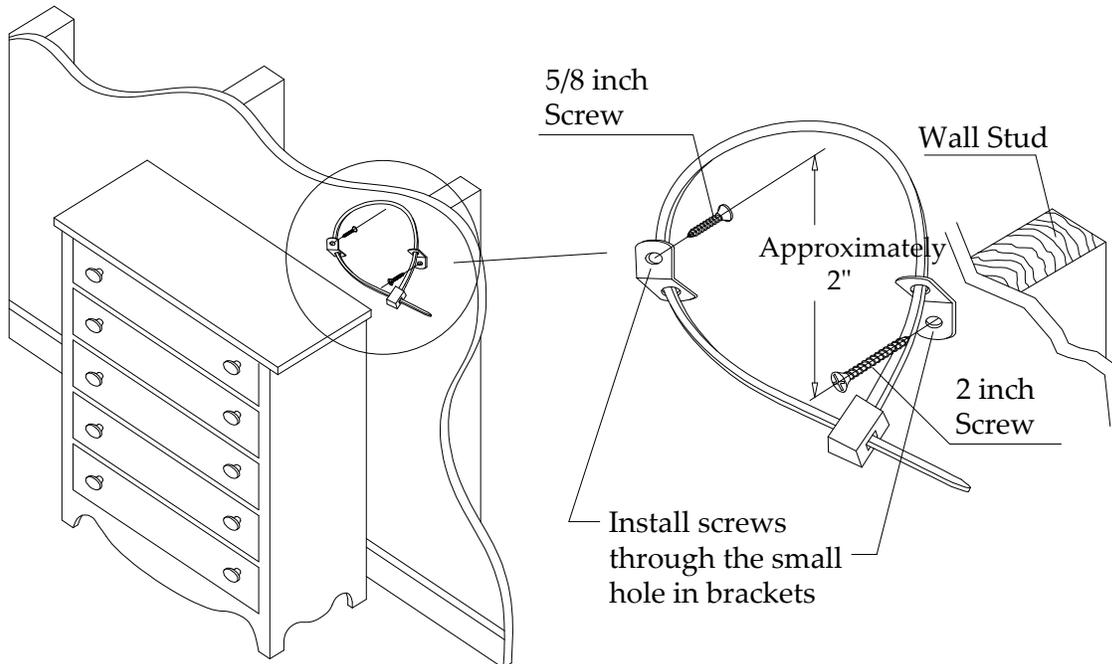

1. Temporarily locate the furniture to near it's final location in the room next to a wall. Locate a wall stud behind your furniture and also mark the stud's location on the back of your furniture.
2. Firmly attach one bracket to the stud approximately 2" below the top of the furniture with the **2 inch long** Wood Screws provided. It may be necessary to drill 3/32 dia. pilot holes for the screws.
3. Firmly attach the other bracket onto a solid, structural part on the back of the furniture using the **5/8 inch long** Wood Screws. It may also be necessary to pilot bore for these screws.
4. Move the furniture into its final position, taking care to line up the wall bracket with the furniture bracket. Thread a strap through the bracket as shown in the illustration. Tighten strap until snug but do not over tighten.

Caution: Riverside Furniture Corp. assumes no liability for improper installation or excessive loads placed on screws, brackets or straps. Failure to detach this restraint before moving furniture may result in personal injury and property damage.

Warning: This tip-over restraint is not to be a substitute for proper adult supervision. Do not allow children to climb on furniture. Items left on top of the TV and furniture, such as toys, remote controls and treats might tempt young children to climb. Push the TV as far back as possible from the front of its stand. Place electrical cords out of a child's reach, and teach children not to play with the cords.