

Riverside






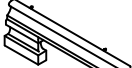

FURNITURE


email info@riverside-furniture.com.

Serenato 64" Console Assembly Instructions

Made In China

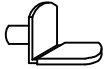Components and Hardware List

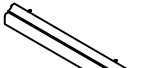Shelf Pin  (A) 4 pcs.	Wire Hoop  (B) 16 pcs.	Wood Shelf  (C) 1 pc.	
Top End Molding (Left & Right)  (E) 1 Set	Center End Molding (Left & Right)  (F) 1 Set	Base End Rail (Left & Right)  (G) 1 Set	Tipping Restraint  (H) 1 pc.


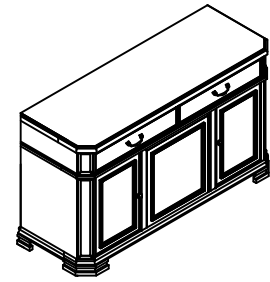


76040 / 76140 64" Console

Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.

Step 1:

Insert Shelf pins (A) into holes in side panels at desired locations, then place Wood adjustable shelf (C) on Shelf pins.

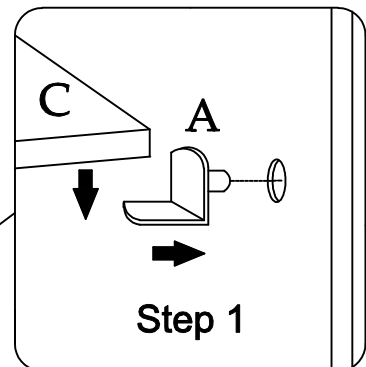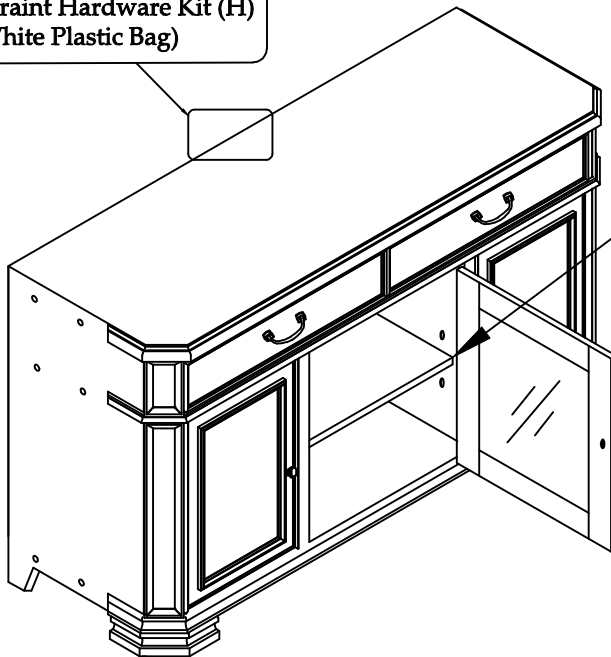

Riverside

FURNITURE

email info@riverside-furniture.com.

Serenato 64" Console Assembly Instructions

Made In China


Note 2:

If the Console is used separately, without using the Pier Bases, attach the KD Left / Right Top, Center and Base Mouldings onto the end panels.

If the Pier Cabinets are used with the Console, the removable End Mouldings should be stored with the unit so they can be used later if need be. One suggestion is to store the mouldings inside or possibly underneath the TV Console unit.

Note 3:

If required, the TV Console can be adjusted with the levelers located underneath cabinet. Locate the leveller through the holes in the bottom panel, place your Flat Blade screwdriver into the top of the leveler and turn clock-wise to raise or counter-clockwise to lower that corner of cabinet.

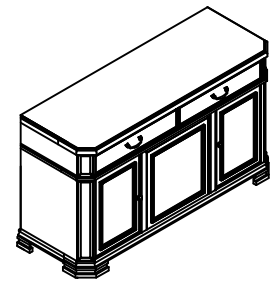

76040 / 76140 64" Console

Step 2. Install the Wire Hoops (B) into the desired sets of holes on the Media Storage Shelves to accommodate the various types of Media.

Step 3: If leveler adjustment must be made, the Media Storage Drawers must be removed in order to access the levelers. With the drawer fully open, the drawer slides must be released by pressing the "trigger" located in the slide either up or down, depending on which side is being removed. With both triggers pressed, gently pull the drawer until the slides release.

After the levelers have been adjusted, very carefully reinstall the Media Storage Drawer by aligning the ball bearings into the channels of the drawer guides and push the drawer back into the Cabinet

