

Components and Hardware List

File rod (Installed)
29-3/8 long



 
(H1) 2 pcs.

Mending Plate
(Installed)



(H2) 4 pcs.

Wood Screw
(Installed)



(H3) 4 pcs.

Anti-Tip
Restraint Kit



(H4) 1 pc.






10244 3-Drawer Chest

For product and personal safety, this furniture is equipped with safety hardware to prevent the middle and bottom drawers from being opened at the same time, to minimize the risk of the cabinet accidentally tipping forward. Please do not try to override this feature and completely close one drawer before attempting to open the other.

The bottom drawer is equipped with hardware which can be used to allow letter size hanging file folders to be used.

Note: There are levelers underneath all four corners which can be adjusted to compensate for uneven flooring if needed.

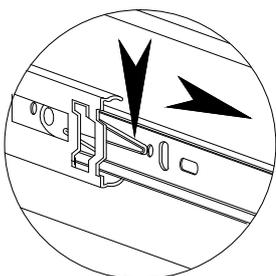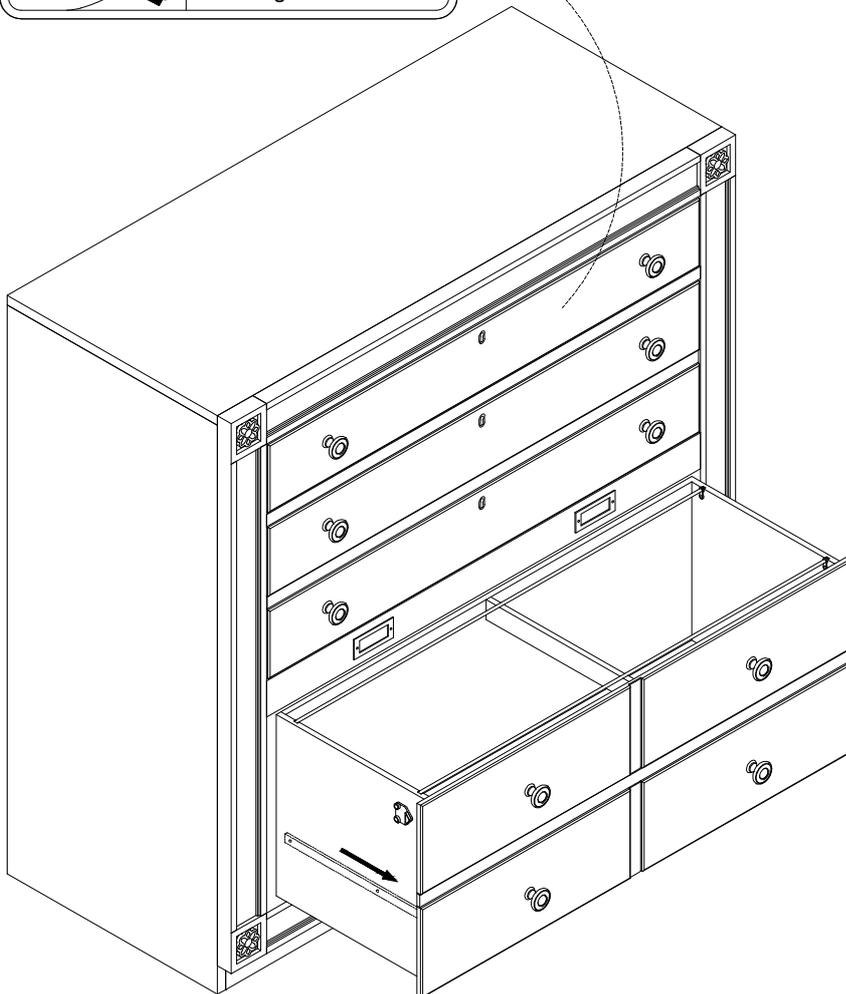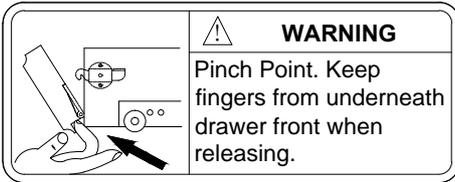

To release
drawer slide

To remove the drawer if it becomes necessary:

- Pull the drawer fully open so the black latch is visible in the inside channel of the guides.
- Release the latches by simultaneously pushing one lever up and the other down.
- At the same time, pulling the drawer forward until the slides release. If necessary, empty drawer before removing.

To Reinstall Drawer:

- Carefully reinstall the drawer by aligning the channels on the drawer with the ball bearings in the channels of the cabinet members and gently pushing the drawer closed.
- Carefully open the drawer to verify it is working properly.

Steps For Removing Drawers Equipped With Anti-Tip Drawer Interlock.


Drawer Anti-Tip Inter-lock Mechanism

The drawer interlock mechanism / wedge blocks have been carefully installed at the factory for proper operation. The mechanism is activated by the black plastic wedge block attached to the side of the drawer. When either drawer is opened, the wedge block pulls the corresponding arm of the mechanism forward, locking the other arm and preventing the other drawer from opening. When the drawer is closed, the wedge block pushes the arm back, allowing either drawer to be opened. The position of all three components relative to each other is critical and must not be modified except by an experienced furniture repair technician if they fail to function properly. In the rare event any of the parts become misaligned and both drawers can be opened at the same time, use extreme care until a repair technician can correct the problem.


Drawer Removal

If a drawer is removed, it must be reinstalled back into the same opening for the anti-tip drawer interlock mechanism to function properly.

When either drawer is pulled open, the wedge block attached on the side of that drawer moves the arm of the snapper forward, locking the arm for the other drawer, thereby preventing the other drawer from being opened. If both drawers must be removed, after pulling the first drawer open and removing, the arm of the snapper that was pulled forward by the first drawer must be pushed back to the upright position, which will unlock the arm for the second drawer and allow it to be removed also.

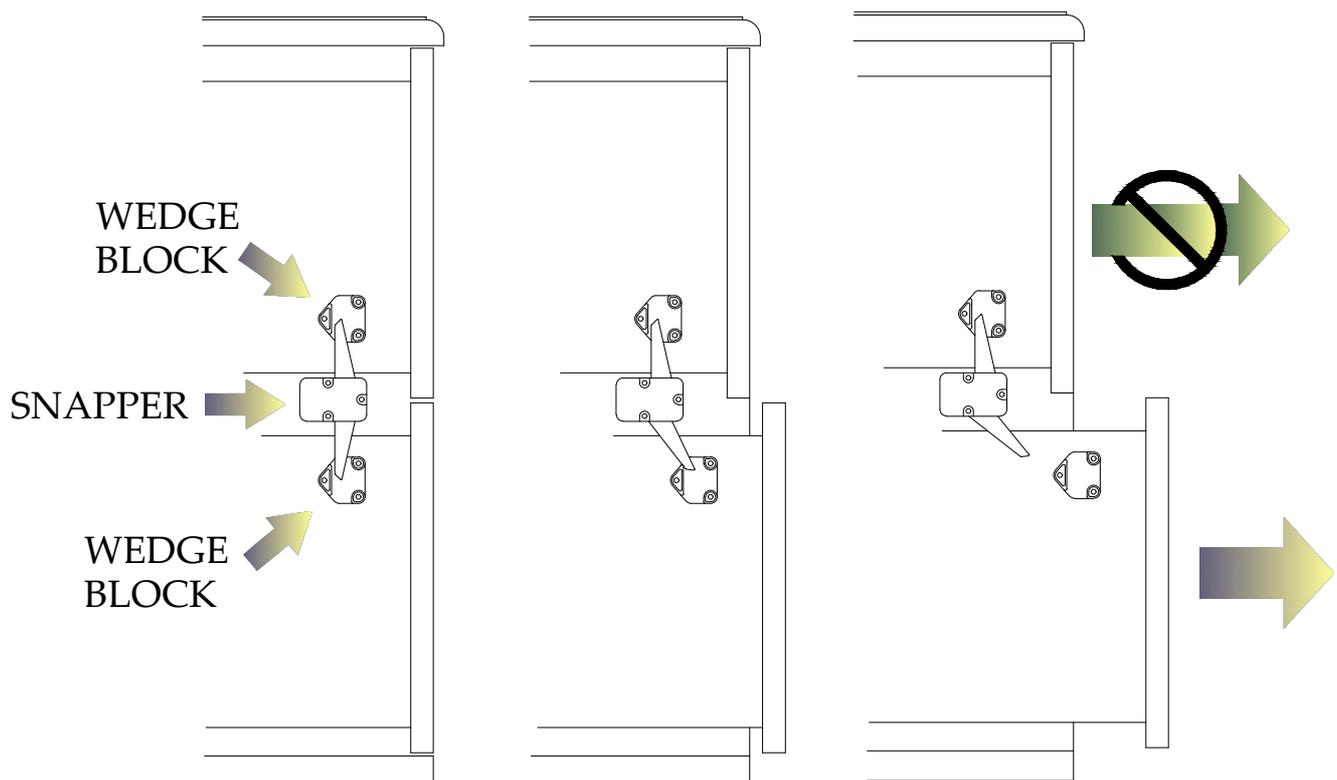

Notice: Riverside Furniture Corp. recommends that steps be taken for certain furniture items to prevent or minimize the risk of tip-over. This furniture is equipped with Tip-over Restraint Hardware for use to minimize this risk, if used. Please follow below installation steps. Riverside Furniture Corp. recommends that parents and guardians periodically visit the U.S. Consumer Product Safety Commission (CPSC) website at <http://www.cpsc.gov/> and stay up to date on all issues related to children's product safety.

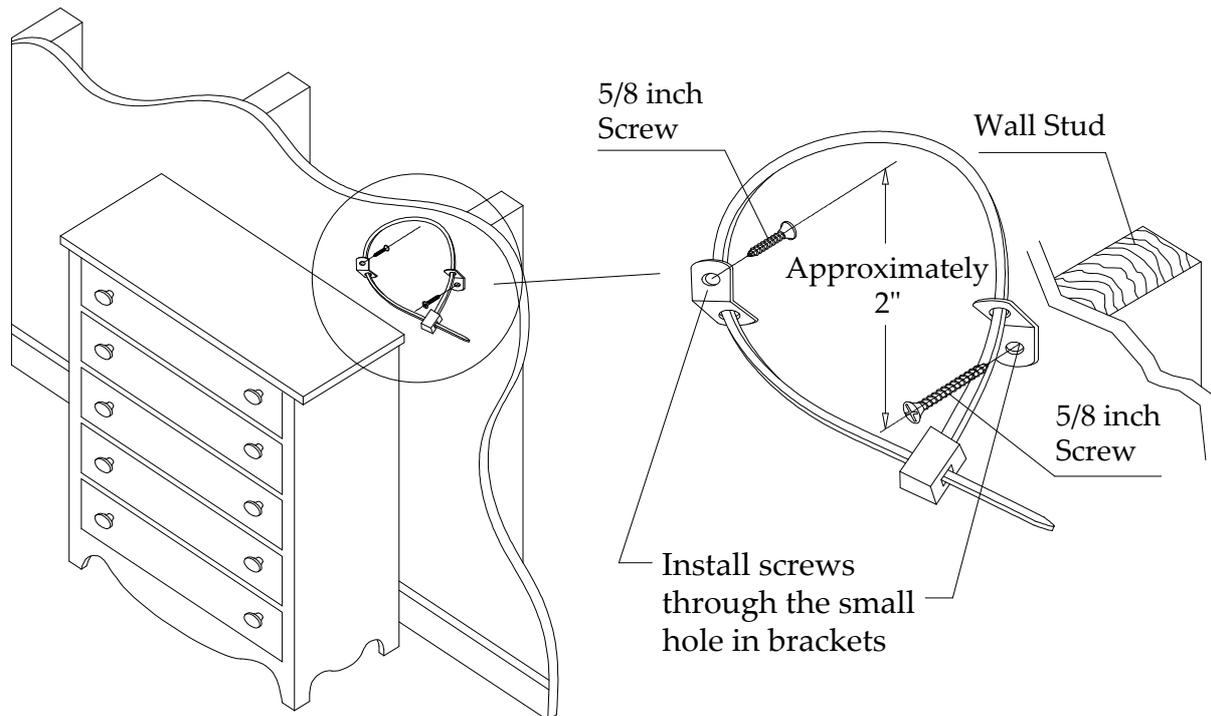

1. Temporarily locate the furniture to near it's final location in the room next to a wall. Locate a wall stud behind your furniture and also mark the stud's location on the back of your furniture.
2. Firmly attach one bracket to the stud approximately 2" below the top of the furniture with the **2 inch long** Wood Screws provided. It may be necessary to drill 3/32 dia. pilot holes for the screws.
3. Firmly attach the other bracket onto a solid, structural part on the back of the furniture using the **5/8 inch long** Wood Screws. It may also be necessary to pilot bore for these screws.
4. Move the furniture into its final position, taking care to line up the wall bracket with the furniture bracket. Thread a strap through the bracket as shown in the illustration. Tighten strap until snug but do not over tighten.

Caution: Riverside Furniture Corp. assumes no liability for improper installation or excessive loads placed on screws, brackets or straps. Failure to detach this restraint before moving furniture may result in personal injury and property damage.

Warning: This tip-over restraint is not to be a substitute for proper adult supervision. Do not allow children to climb on furniture. Items left on top of the TV and furniture, such as toys, remote controls and treats might tempt young children to climb. Push the TV as far back as possible from the front of its stand. Place electrical cords out of a child's reach, and teach children not to play with the cords.