



Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.

Component And Hardware List

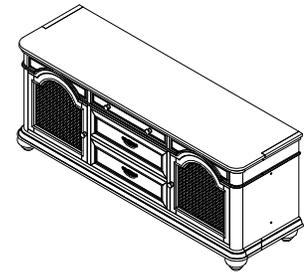

Entertainment Console
 Item #15840

<p>TV Console</p> <p>(A) 1 PC.</p>	<p>Bun Feet</p> <p>(B) 4 PCS.</p>	<p>Center Leg 4-1/4" long with leveler & 1/4" bolt</p> <p>(C) 1 PC.</p>	<p>Levelers</p> <p>(D) 5 PCS.</p>			
<p>Wood plug 10mm</p> <p>(E) 4 PCS.</p>	<p>Anti-Tip Restraint Kit</p> <p>(F) 2 PCS.</p>	<p>Removable Top End Molding (Left)</p> <p>(L) 1 PC.</p>	<p>Removable Top End Molding (Right)</p> <p>(R) 1 PC.</p>	<p>Removable Waist Molding (Left or Right)</p> <p>(H) 2 PCS</p>	<p>Removable Base End Molding (Left)</p> <p>(J) 1 PC.</p>	<p>Removable Base End Molding (Right)</p> <p>(K) 1 PC.</p>

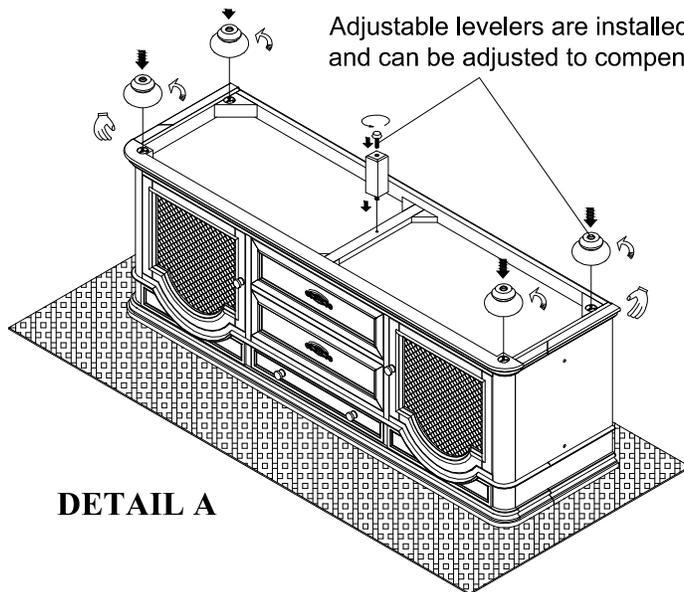

Adjustable levelers are installed in the bottom of the Bun Feet and can be adjusted to compensate for unlevel flooring if needed

Note:

The TV Console can be used as any of three different options.

- A: As a stand-alone TV Console
- B: With the Hutch mounted on top.
- C: With the Hutch and with the Left and Right Pier Cabinets.


ASSEMBLY PROCEDURE:

1. Place the TV Console on its top, or back, on a soft and smooth surface.
2. Screw the four Bun Feet (B) & Center Leg (C) to the bottom of the TV Console (A) as shown in **DETAIL A**.
3. Carefully turn the assembled TV Console upright.

Note: If the Left and Right Pier Cabinets are not going to be used with the TV Console, perform Steps 4 & 5 below.

4. Press the Wood Plugs (E) into the holes located on the sides of the TV Console.
5. Attach the Removable Left & Right Top and Base End Moldings by mating the connectors and sliding the Moldings towards the front of the Console. The Waist Molding is held in position on the TV Console using magnets.

DETAIL A

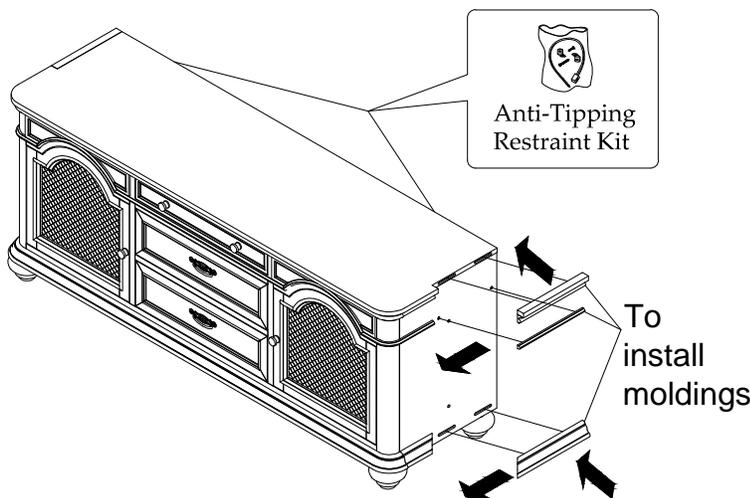

DETAIL B


If using the Left & Right Piers, the Removable End Moldings and Wood Plugs will not be used, but should be stored with the units for possible future use.

THANK YOU FOR YOUR PURCHASE.

email: info@riverside-furniture.com


Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.

15844 Hutch

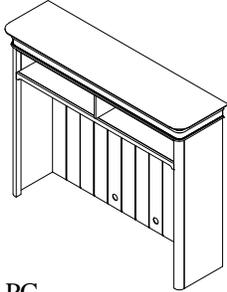


1 PC.

15840 TV Console

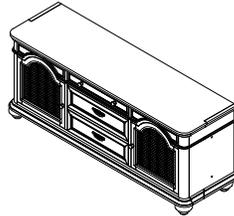


1 PC.

15848/15849 Pier L&R

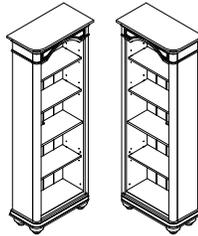


1 PC.

1 PC.

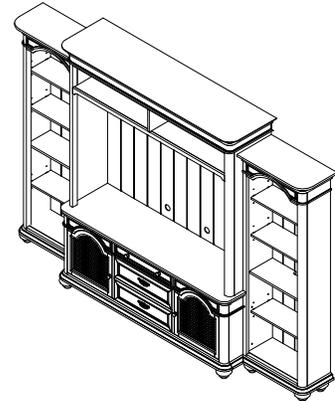

Item #15840/#15844
#15848/#15849

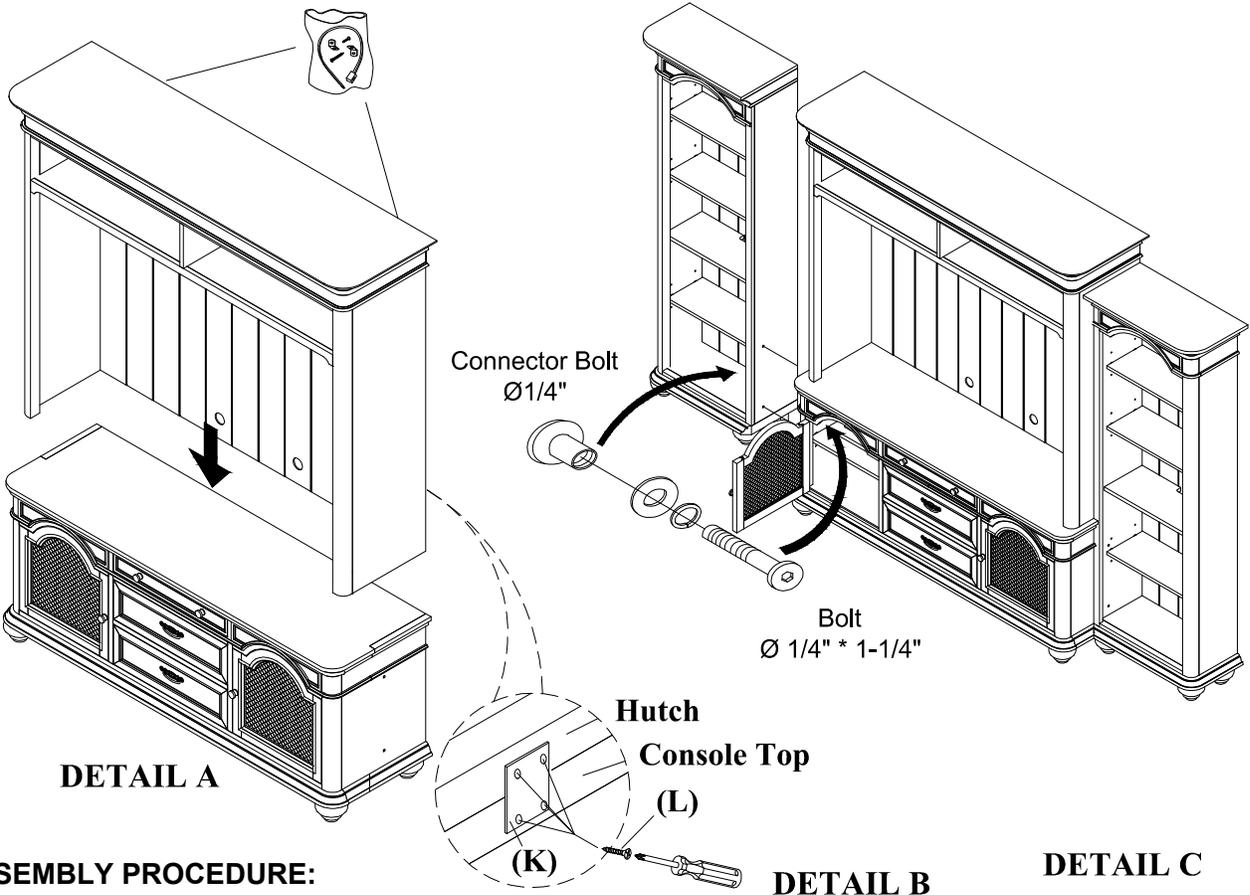

ASSEMBLY PROCEDURE:

If the TV Console and Hutch are being used with the Left and Right Pier Cabinets, the Top, Middle and Bottom End Moldings will not be used on the ends of the TV Console. The Top and Bottom Moldings are removed by sliding the moldings towards the back of the Console and pulling out. The Middle molding is held in place with magnets and can be pulled off. It is highly recommended that the moldings be stored with the Console, either inside or underneath, so they can be used again later if desired.


To have a stable Wall System, the Pier Cabinets must be connected to the TV Console. The Connector Bolts and Nuts are packed with the Pier Cabinets.

After moving the TV Console & Hutch to the final location in the room, move each Pier Cabinet against the end of the Console and connect the units together with the Connector Bolts, Washers and Nuts as shown above. Tighten with the Allen Wrench.

THANK YOU FOR YOUR PURCHASE.

Anti-Tip Hardware Installation Instructions

Notice: Riverside Furniture Corp. recommends that steps be taken for certain furniture items to prevent or minimize the risk of tip-over. This furniture is equipped with Tip-over Restraint Hardware for use to minimize this risk, if used. Please follow below installation steps. Riverside Furniture Corp. recommends that parents and guardians periodically visit the U.S. Consumer Product Safety Commission (CPSC) website at <http://www.cpsc.gov/> and stay up to date on all issues related to children's product safety.

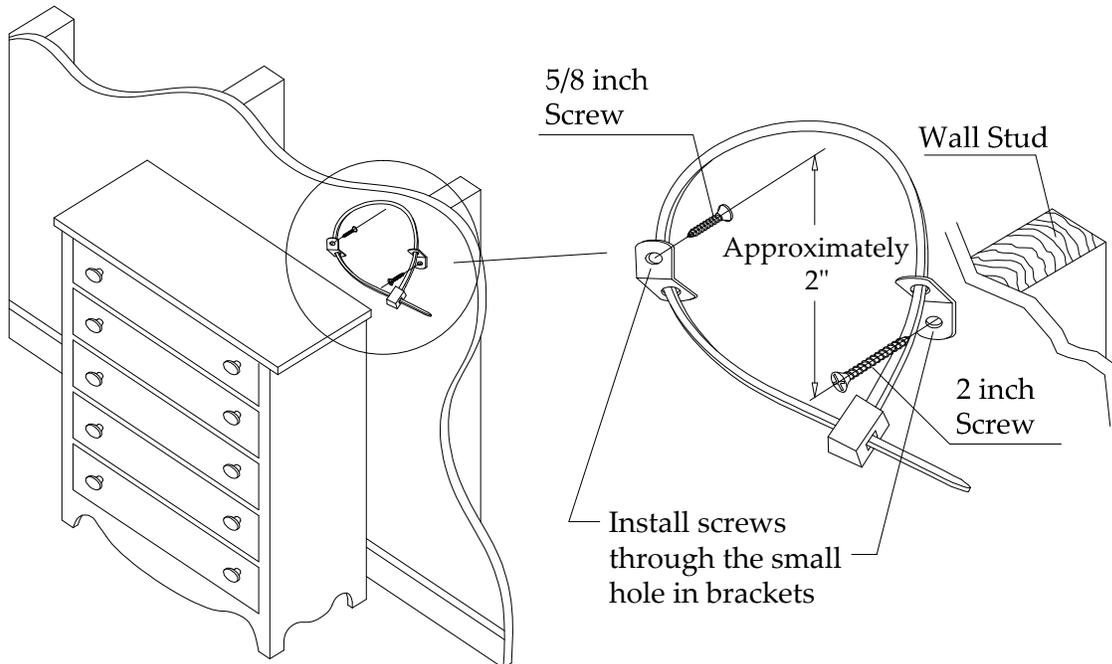

1. Temporarily locate the furniture to near it's final location in the room next to a wall. Locate a wall stud behind your furniture and also mark the stud's location on the back of your furniture.
2. Firmly attach one bracket to the stud approximately 2" below the top of the furniture with the **2 inch long** Wood Screws provided. It may be necessary to drill 3/32 dia. pilot holes for the screws.
3. Firmly attach the other bracket onto a solid, structural part on the back of the furniture using the **5/8 inch long** Wood Screws. It may also be necessary to pilot bore for these screws.
4. Move the furniture into its final position, taking care to line up the wall bracket with the furniture bracket. Thread a strap through the bracket as shown in the illustration. Tighten strap until snug but do not over tighten.

Caution: Riverside Furniture Corp. assumes no liability for improper installation or excessive loads placed on screws, brackets or straps. Failure to detach this restraint before moving furniture may result in personal injury and property damage.

Warning: This tip-over restraint is not to be a substitute for proper adult supervision. Do not allow children to climb on furniture. Items left on top of the TV and furniture, such as toys, remote controls and treats might tempt young children to climb. Push the TV as far back as possible from the front of its stand. Place electrical cords out of a child's reach, and teach children not to play with the cords.