
 


Components and Hardware List

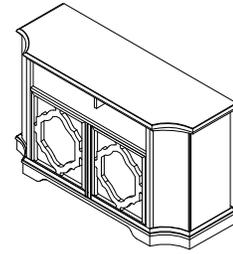

 
21564 & 21764
Media Chest

Middle Adjustable Shelf
(installed)



A 2 pcs.

End Adjustable Shelf
(installed)



B 4 pcs.

Center Foot (installed)



 
D 1 pc.

Screw (installed)
#3 x 15



E 24 pcs.

Adjustable Shelf Support
(installed)



F 24 pcs.

Anti-tip Restraint Kit



G 1 pc.

Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.


ASSEMBLY STEPS :

1. Carefully place the Media Chest on its back on a clean, soft surface such as a blanket or carpet.
2. Assemble the Center Foot (D) on the bottom of the Media Chest, as shown.
3. Using two people, carefully set the Chest upright and move to the desired location in the room.

Note:


The Adjustable Shelves (A),(B) have been installed for shipping. These are secured using the Screws underneath the shelf. In order to move the Shelves to a different location, using your Phillips screwdriver, remove the screws and move the Shelf Pins and Shelves as desired.

4. Insert the Shelf Pins (F) into the holes of the End Panels at the desired levels. Place the Adjustable Shelves on the Shelf Pins. The screws do not need to be reinstalled.
5. There are levelers located under the corners of the Media Chest and Center Foot which can be adjusted if necessary to compensate for uneven flooring.

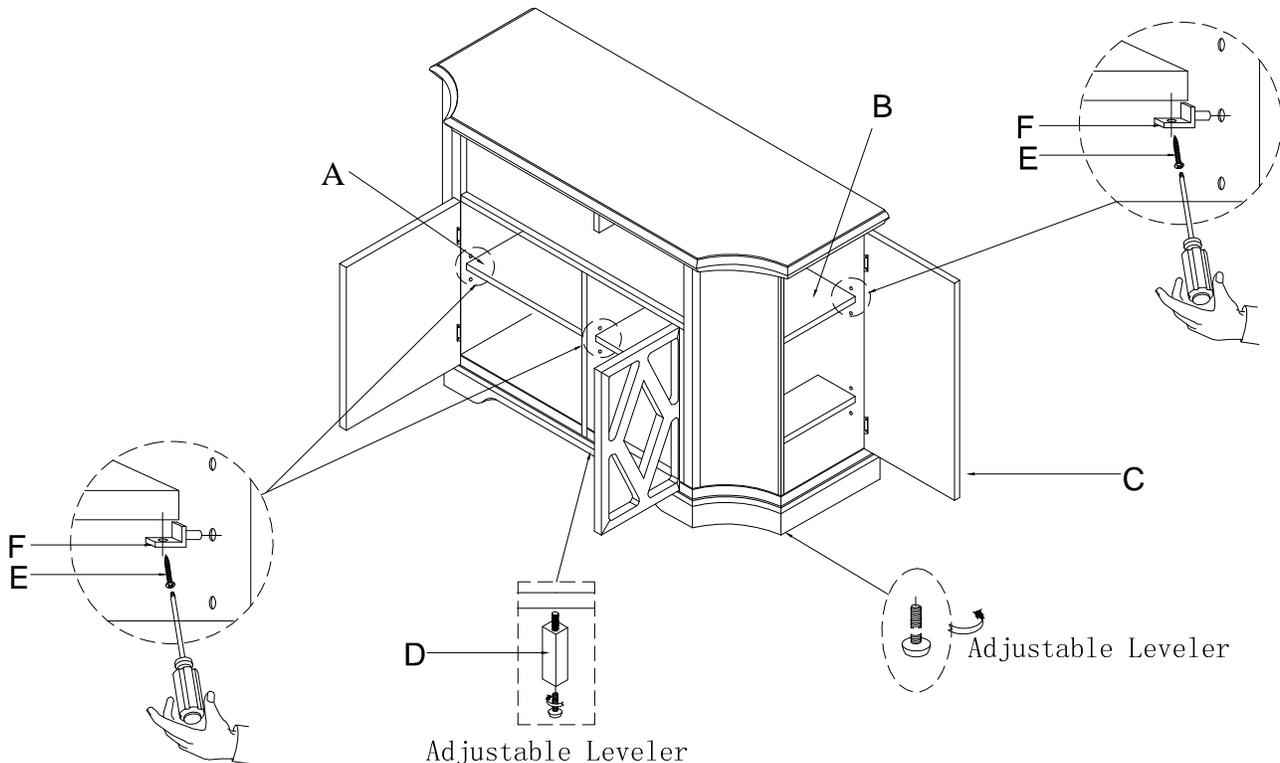

Anti-Tip Hardware Installation Instructions

Notice: Riverside Furniture Corp. recommends that steps be taken for certain furniture items to prevent or minimize the risk of tip-over. This furniture is equipped with Tip-over Restraint Hardware for use to minimize this risk, if used. Please follow below installation steps. Riverside Furniture Corp. recommends that parents and guardians periodically visit the U.S. Consumer Product Safety Commission (CPSC) website at <http://www.cpsc.gov/> and stay up to date on all issues related to children's product safety.

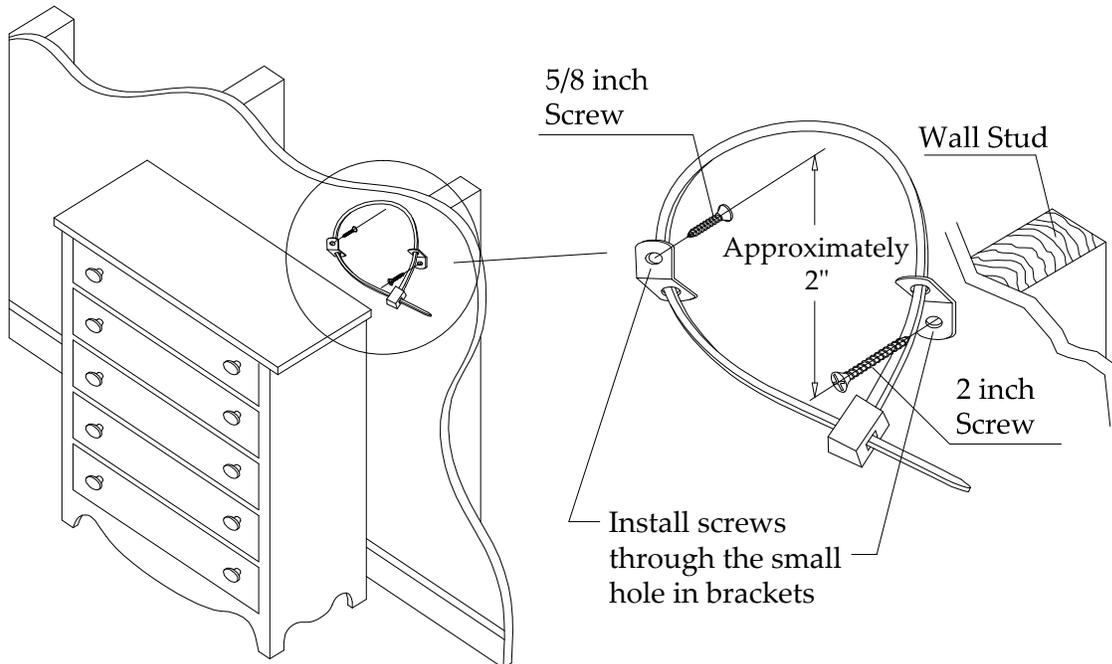

1. Temporarily locate the furniture to near it's final location in the room next to a wall. Locate a wall stud behind your furniture and also mark the stud's location on the back of your furniture.
2. Firmly attach one bracket to the stud approximately 2" below the top of the furniture with the **2 inch long** Wood Screws provided. It may be necessary to drill 3/32 dia. pilot holes for the screws.
3. Firmly attach the other bracket onto a solid, structural part on the back of the furniture using the **5/8 inch long** Wood Screws. It may also be necessary to pilot bore for these screws.
4. Move the furniture into its final position, taking care to line up the wall bracket with the furniture bracket. Thread a strap through the bracket as shown in the illustration. Tighten strap until snug but do not over tighten.

Caution: Riverside Furniture Corp. assumes no liability for improper installation or excessive loads placed on screws, brackets or straps. Failure to detach this restraint before moving furniture may result in personal injury and property damage.

Warning: This tip-over restraint is not to be a substitute for proper adult supervision. Do not allow children to climb on furniture. Items left on top of the TV and furniture, such as toys, remote controls and treats might tempt young children to climb. Push the TV as far back as possible from the front of its stand. Place electrical cords out of a child's reach, and teach children not to play with the cords.