 



### HARDWARE LIST

E



Metal Base (1 pc)

 
F




Hydraulic Rod Assembly (1 set)

G		4MM	1 PC
H		ø1/4" x 1-1/2"L	2 PCS
I		ø1/4" x 10MM	2 PCS
J		ø1/4" x 12MM	2 PCS
K		ø8 x 1-3/4"L	6 PCS
L		ø7 x 5/8"L	5 PCS
M		14MM	1 PC
N		Casters	5 PCS


### PART LIST

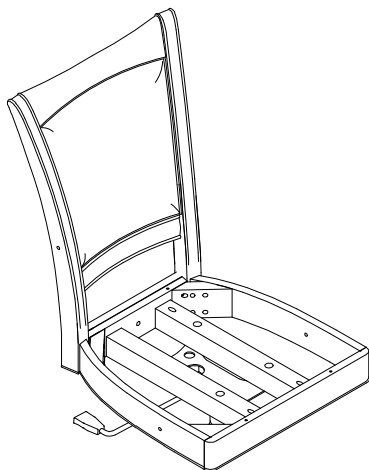


A Seat and Back Frame(1 pc)

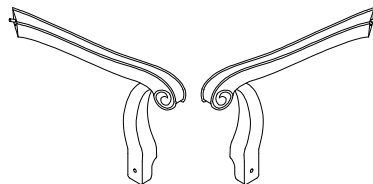

B  
Arm Rest  
(one right & one left)

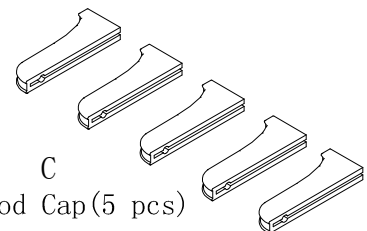

C  
Wood Cap(5 pcs)

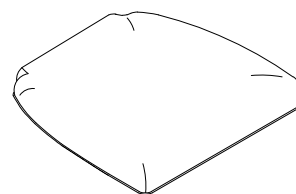





D  
Seat Cushion(1 pc)

**Step 1:** Assemble the Left and Right Arm to the Seat & Back Frame using a 1-1/2" long Allen Head Bolt (H), Spring Washer (I), and Flat Washer (J), at the front of the Arm. Do not fully tighten bolt until after fully attaching back end of arm. Attach the back end of the Arm to the Chair Back, pulling the parts snug together, and using your Phillips Screwdriver, install a 1-3/4" Wood Screw (K) into the chair back. Tighten the Bolt at the front using the Allen Wrench (G). Repeat for other Arm.

**Step 2:** Turn the Seat Cushion (D) upside down and place it onto the corner of a table with the front edge facing inward. Carefully turn the chair assembly upside down and center it on the bottom side of the Seat Cushion. Attach the Seat Cushion using the four 1 3/4" long Wood Screws (K) and your Phillips Screwdriver.


**Step 3:** Assemble the Wood Caps (C) onto the top of the Metal Base. Pivot the metal plates across each metal leg and attach using the 5/8" long Wood Screws (L) and your Phillips Screwdriver.

**Step 4:** Attach the Casters (N) at the ends of the metal base. Tighten with the Open Wrench (M).

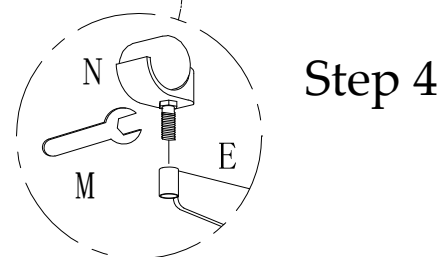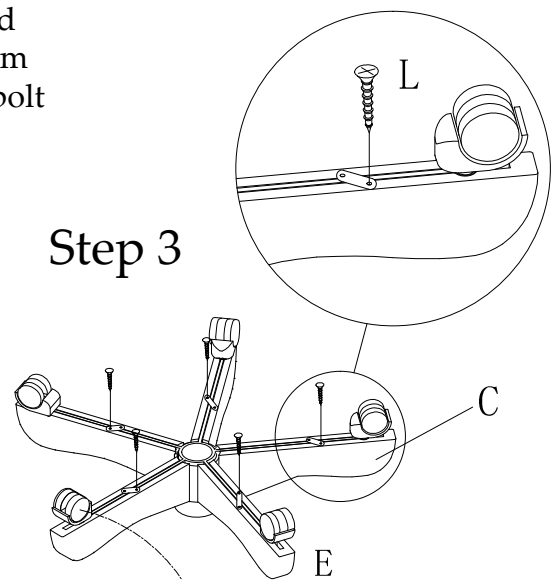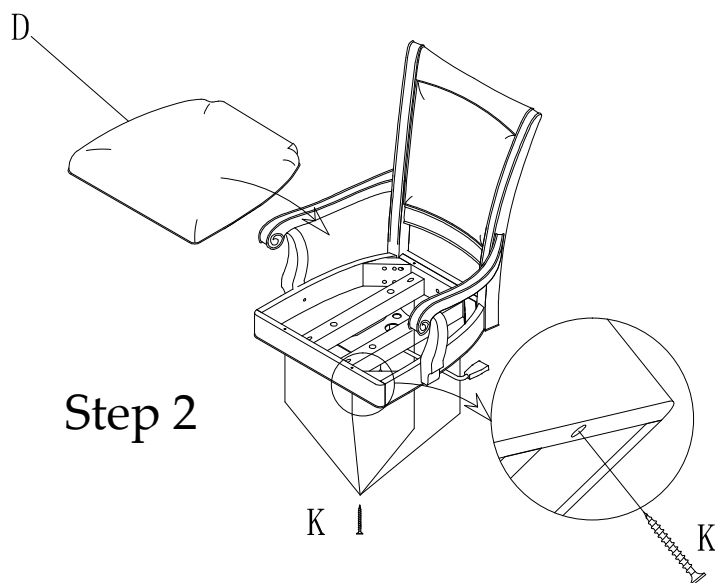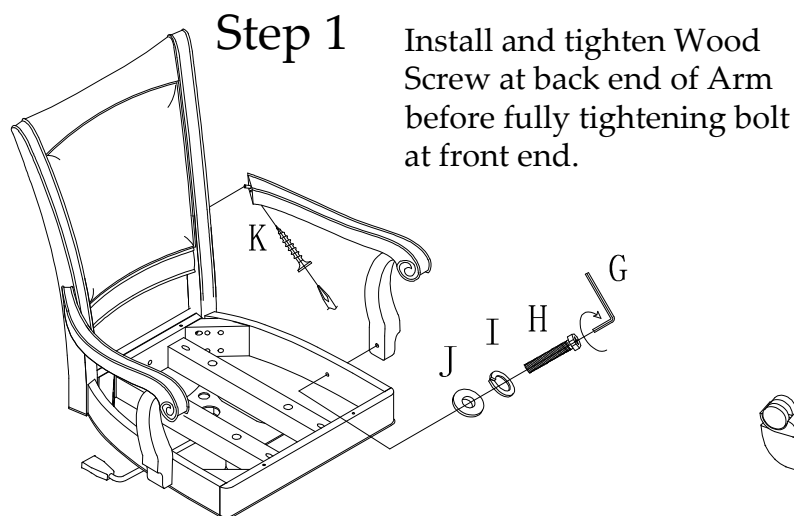


Step 5: Place the assembled Metal Base on the floor and insert the Hydraulic Rod Assembly (F) into the center hole of the Metal Base. Install the Black Plastic covers over the Hydraulic Rod.



Step 5

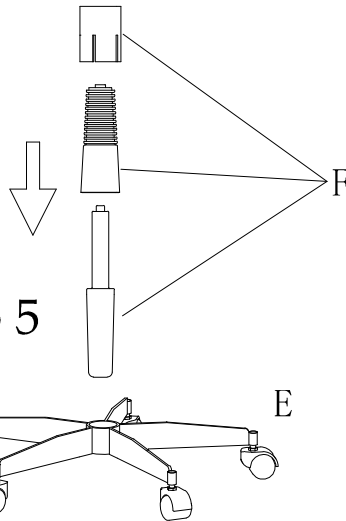

Step 6: Position the hole on the bottom side of the Chair Mechanism, that is attached to the bottom side of the Chair Seat onto the top end of the Hydraulic Rod and press down on the seat to secure it onto the top of the Hydraulic Rod.

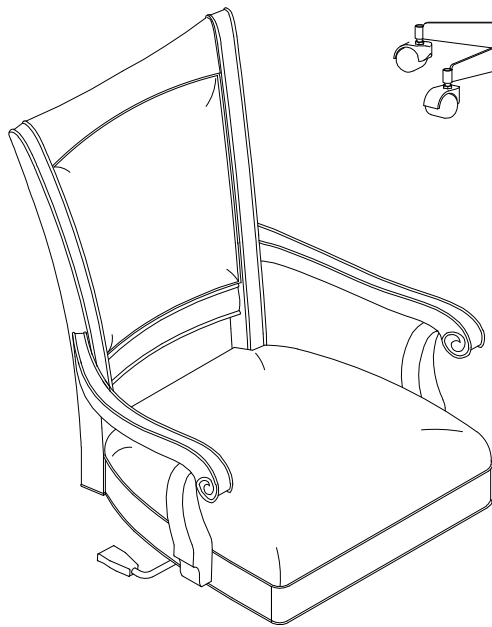

Step 6

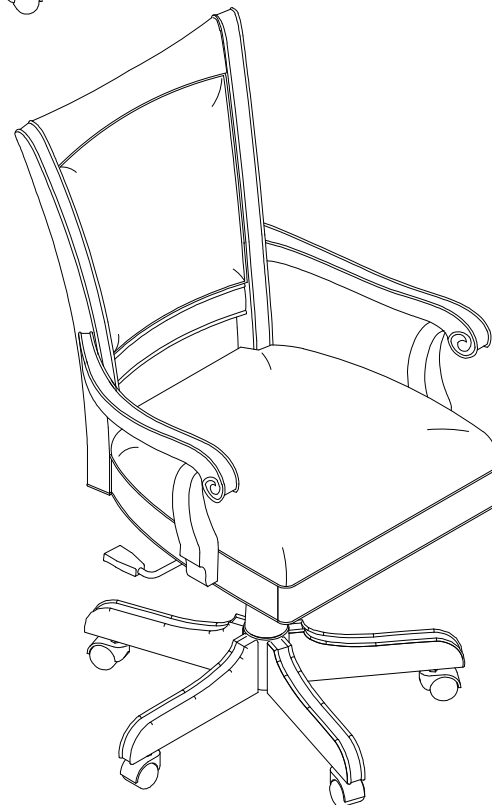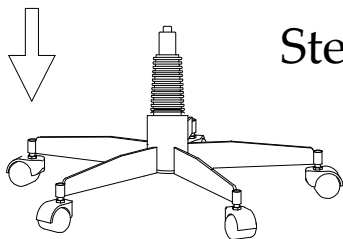

Note: The lift lever is in a locked position for shipping the chair. To unlock, pull the lever straight out and it can then be activated to raise or lower the chair.

How to care for your new purchase:

The touch of a soft cloth is all that is necessary for normal maintenance. Never use harsh chemicals or abrasive cleaning. Application of a good furniture polish semi-annually to all wood surfaces is suggested.

Your chair is equipped with casters for convenient mobility, however, to prevent possible damage to hardwood, vinyl or other types of resilient flooring, always use a floor protector underneath the chair.