


Product No.	Product Description
26241	Entertainment Console
26244	Bridge and Back Panel
26247	Left Pier
26249	Right Pier

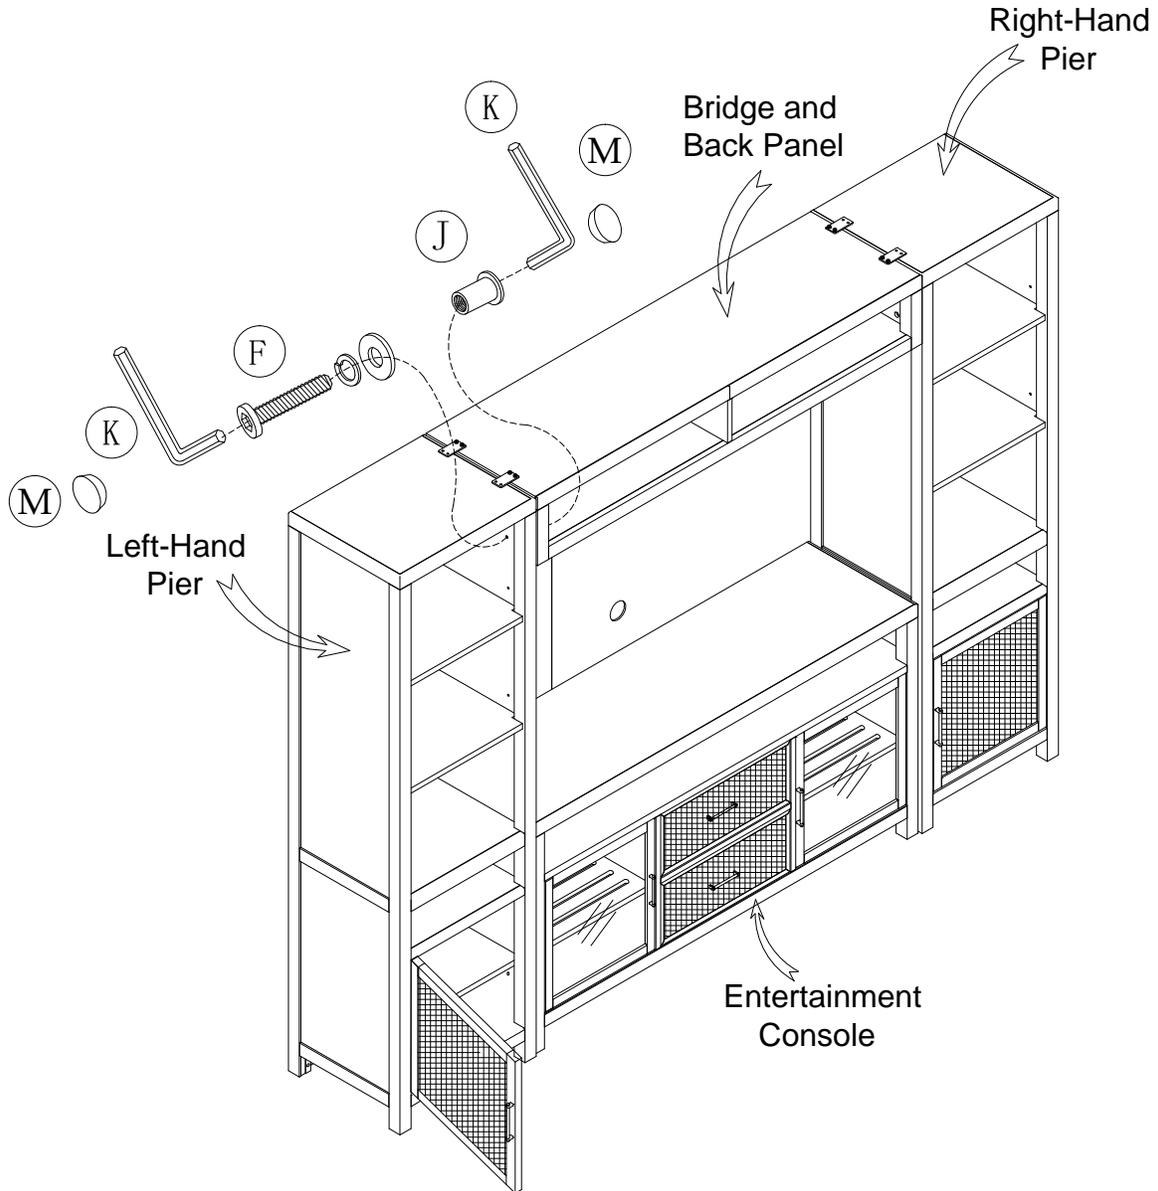

## Components and Hardware List

Support Leg  
3-7/8" long w/  
leveler & 1/4"  
Bolt

(A)  1 pc.


Leveler


(B)  5 pcs.

Shelf Pins

(C)  8 pcs.

Wood Shelf

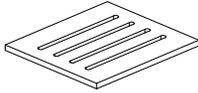(D)  2 pcs.

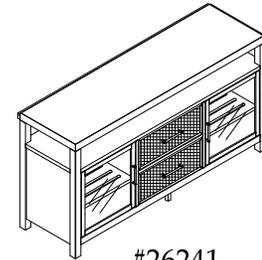

#26241  
Entertainment Console

Anti-Tipping  
Restraint Kit

(E)  2 pcs.

4mm Allen  
Wrench

(F)  1 pc.



Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.



### Note:

- Carefully place the Console on its back and install the levelers into the bottom of each leg. The levelers can be used to compensate for uneven flooring if needed.
- Carefully stand the Console upright and move to the desired location in the room.
- Open the doors and install the Shelf Pins (C) at the desired levels and place the Wood Shelves (D) on the pins.


Note B: If the Console will be used without the Pier Cabinets and Back Panel, if desired, the Wood Rail attached to the Top Back edge can be removed using the Allen Wrench provided.

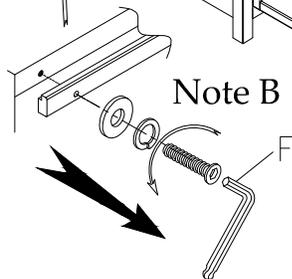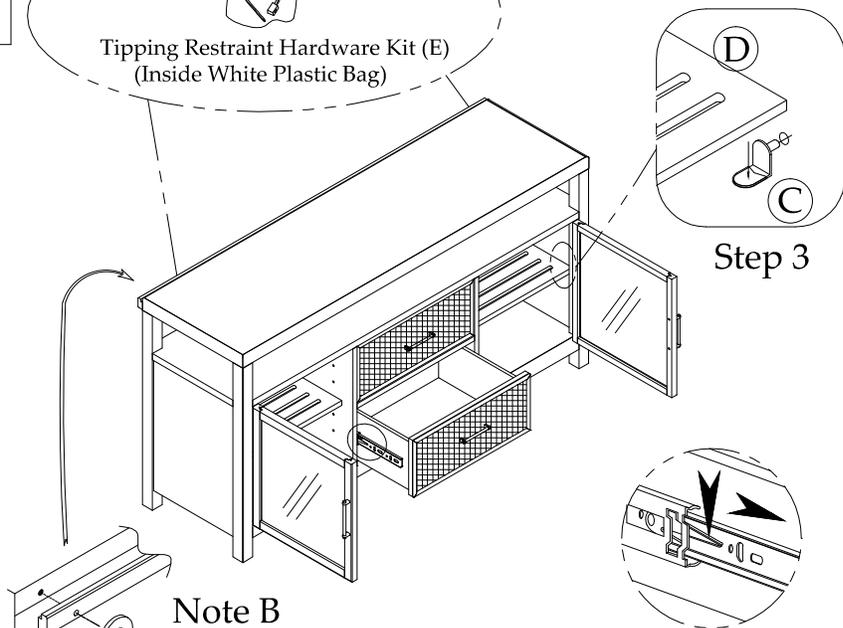



To remove the drawer if it ever becomes necessary:


- Pull the drawer fully open so the black latch is visible in the inside channel of the guides.
- Release the latches by simultaneously pushing one lever up and the other down.
- At the same time, pulling the drawer forward until the slides release.

To reinstall the drawers, carefully align the channels of the guide and push drawer back into Desk. Open and close drawer fully a couple times to verify proper operation.

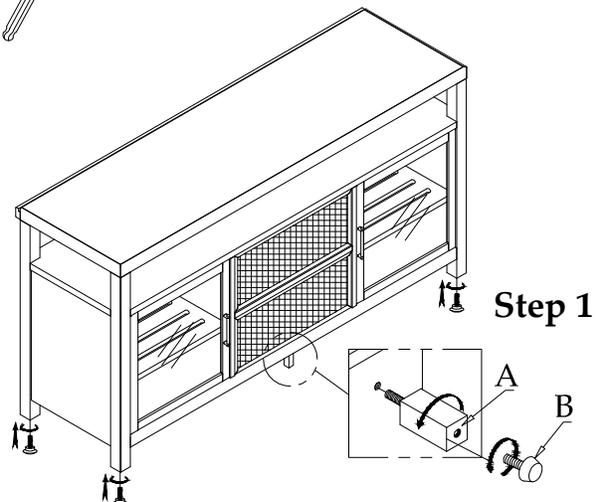

## Components and Hardware List
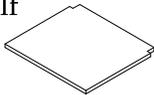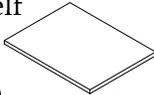
<p>Upper Wood Shelf</p>  <p>(A) 2 pcs.</p>	<p>Lower Wood Shelf</p>  <p>(B) 1 pc.</p>	<p>Shelf Pins</p>  <p>(C) 12 pcs.</p>	<p>Leveler</p>  <p>(D) 4 pcs.</p>
<p>Anti-Tipping Restraint Kit</p>  <p>(E) 1 pc.</p>			

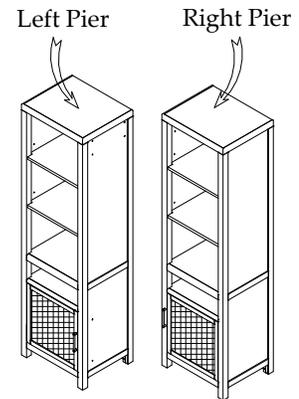

#26247 Left Pier  
#26249 Right Pier


Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.







**Note:**

- Carefully place the Pier Cabinet on its back and install the levelers into the bottom of each leg. The levelers can be used to compensate for uneven flooring if needed.
- Carefully stand the Pier Cabinet upright and move to the desired location in the room.
- Open the door and install the Shelf Pins (C) at the desired levels in the lower area and at the upper area, and place the Wood Shelves (A & B) on the pins.

If using the Pier Cabinet with the TV Console, connect the units together using the Allen Head Bolts (G), Washers (I & J) and Connector Caps (H). Tighten with the Alen Wrench (K).

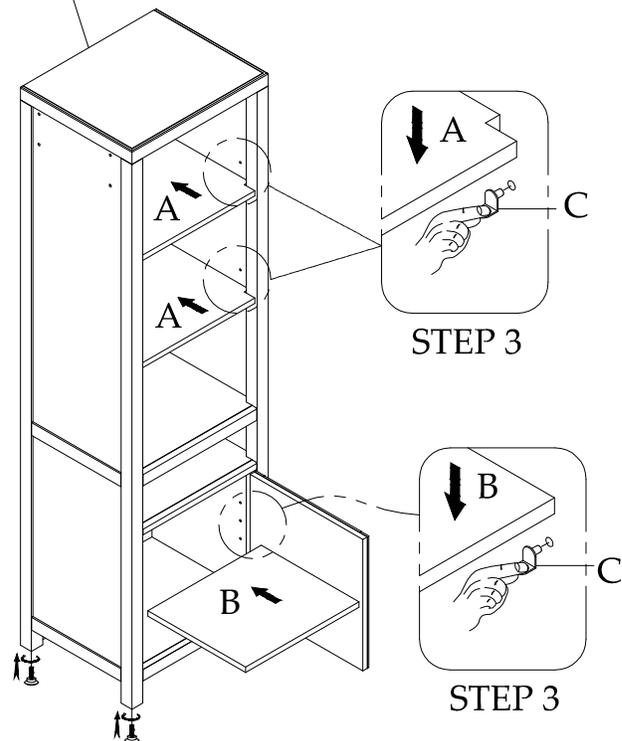

## Components and Hardware List

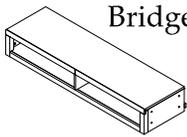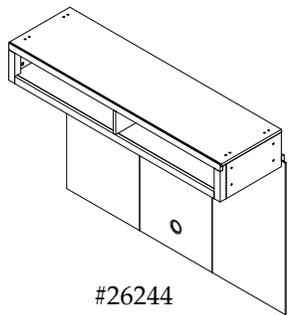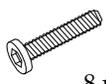 
 <p><b>A</b> Bridge 1 pc.</p>	 <p><b>B</b> Side Back Panel 2 pcs.</p>	 <p><b>C</b> Center Back Panel 1 pc.</p>	 <p><b>D</b> Back Panel Support Rail (installed) 1 pc.</p>	 <p>#26244 Bridge and Back panel</p>
<p>1/4-20 x 1-1/2" Long Allen Head Bolt</p>  <p><b>E</b> 6 pcs.</p>	<p>1/4-20 x 1" Long Allen Head Bolt</p>  <p><b>F</b> 8 pcs.</p>	<p>1/4-20 x 7/8" Long Allen Head Bolt</p>  <p><b>G</b> 8 pcs.</p>	<p>M1/4 Spring Washer</p>  <p><b>H</b> 22 pcs.</p>	<p>Ø17 x H8.5mm Plug</p>  <p><b>M</b> 16 pcs.</p>
<p>M1/4" Flat Washer</p>  <p><b>I</b> 22 pcs.</p>	<p>M1/4 Connector Nut</p>  <p><b>J</b> 8 pcs.</p>	<p>4mm Allen Wrench</p>  <p><b>K</b> 1 pcs.</p>	<p>Mounting Plates</p>  <p><b>L</b> 4 pcs.</p>	<p>Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.</p>

**Note:**

The following steps must be performed to the Bridge, TV Console and Left and Right Piers before they are arranged and connected together.

1: Bridge--Attach the Mounting Plates (L) to the top ends using the 7/8" long Allen Head Bolts (G), Spring Washers (H) and Flat Washers (I). Tighten with the Allen Wrench (K). The Mounting Plates are only intended to help support the Bridge while it is being connected to the Pier Cabinets, and must not be used as the only method of support.


2: If the TV Console is used alone and if desired, the Back Panel Support Rail (D) can also be removed from the back with the Allen Wrench. It is recommended that the Rail and Bolts be stored with the Console for possible future use.

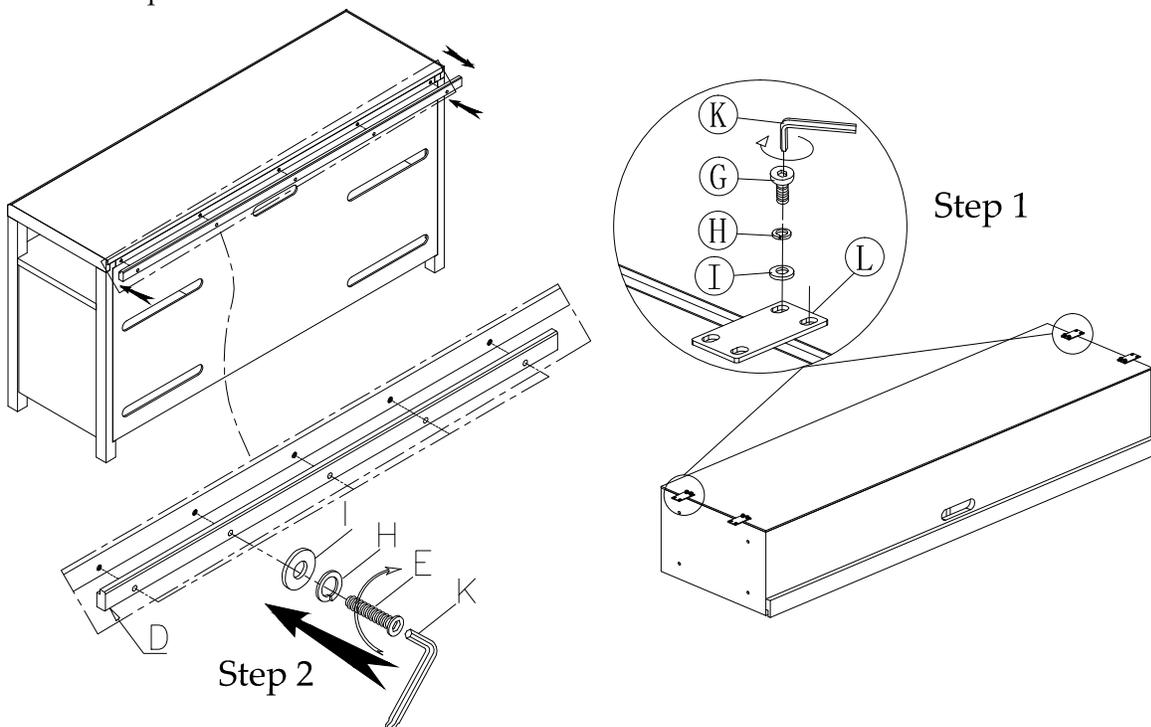

3: Back Panels--Assemble the Side Back Panels (B) to each side edge of the Center Back Panel (C) using the 1-1/2" long Allen Head Bolts (E) and the same Washers as previous Steps. Align the top edges of the panels and tighten with the Allen Wrench. Lean the assembled Back Panels against the wall where the Wall Unit will be assembled together.


4: Carefully move the TV Console to where it will be used in the room.

5: Carefully move the Left and Right Pier Cabinets to be snug to the ends of the TV Console. It is strongly recommended that the Piers be attached to the wall behind using the Anti-Tip Kit attached to the back of the Pier Cabinets. Refer to the mounting instructions on the following pages. Using two people, carefully place the Bridge onto and between the top of the Pier Cabinets. It is advisable that one person continue to support the Bridge while it is being connected to the Pier Cabinets, using the Allen Head Bolts (F), Spring Washers (H) and Flat Washers (I) and Connector Cap inside the Bridge. Tighten Bolts using the Allen Wrench (K). Press the Plugs (M) over the Connector Bolts and Caps.

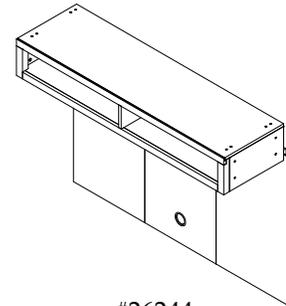

#26244


Bridge and Back panel

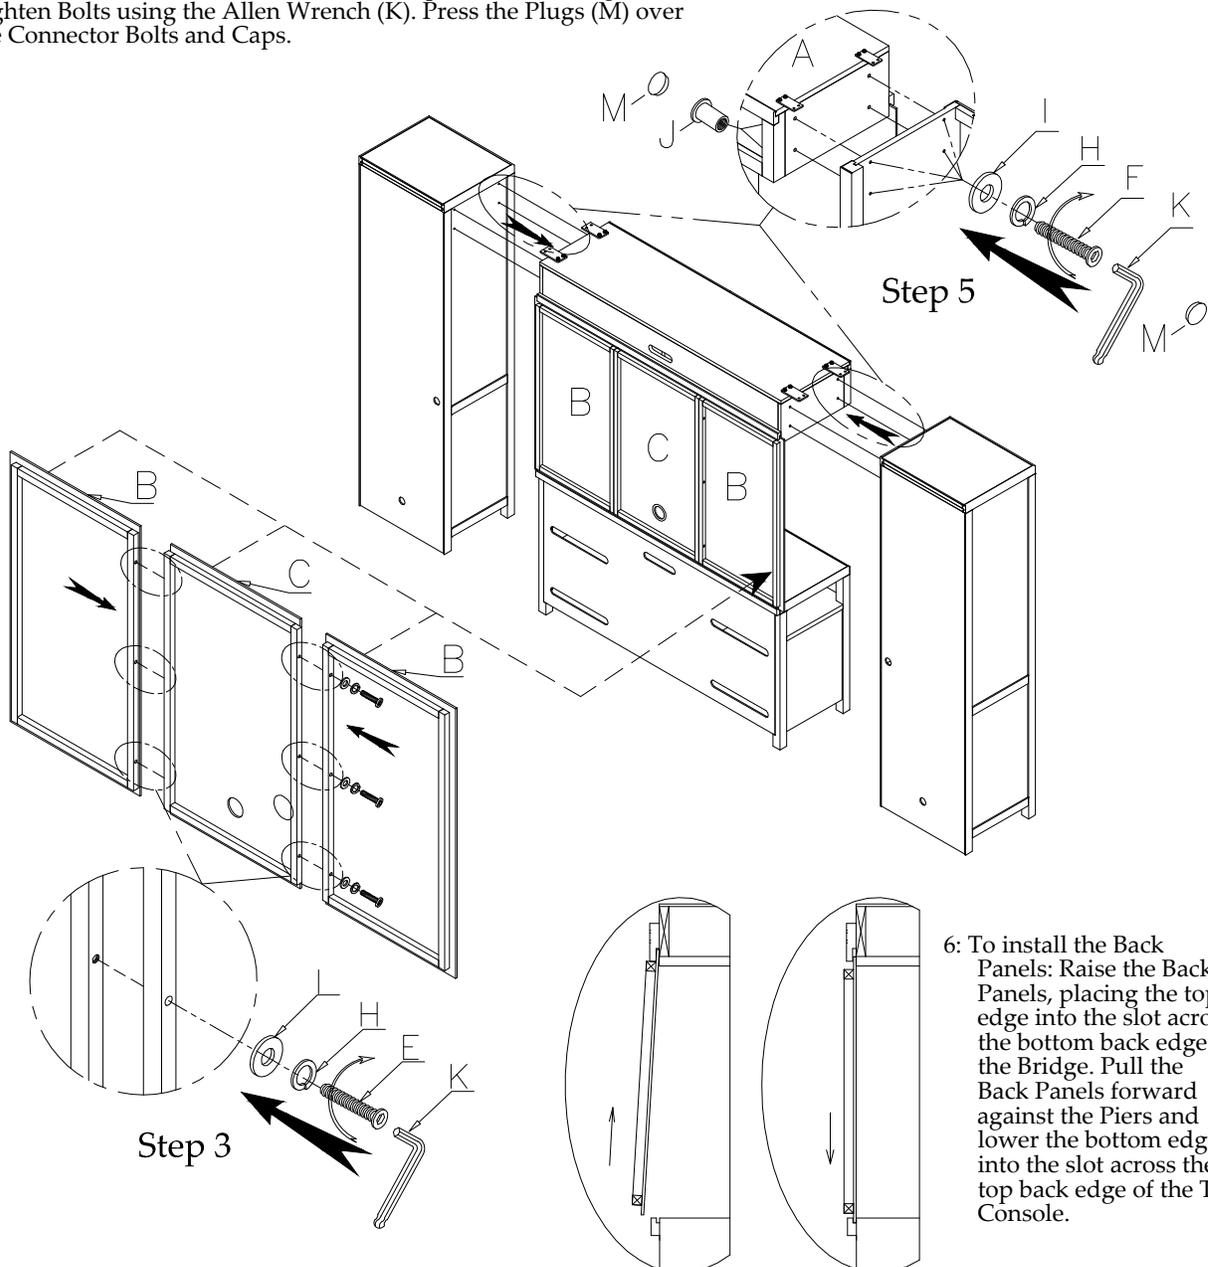

6: To install the Back Panels: Raise the Back Panels, placing the top edge into the slot across the bottom back edge of the Bridge. Pull the Back Panels forward against the Piers and lower the bottom edge into the slot across the top back edge of the TV Console.

## Anti-Tip Hardware Installation Instructions

Notice: Riverside Furniture Corp. recommends that steps be taken for certain furniture items to prevent or minimize the risk of tip-over. This furniture is equipped with Tip-over Restraint Hardware for use to minimize this risk, if used. Please follow below installation steps. Riverside Furniture Corp. recommends that parents and guardians periodically visit the U.S. Consumer Product Safety Commission (CPSC) website at <http://www.cpsc.gov/> and stay up to date on all issues related to children's product safety.

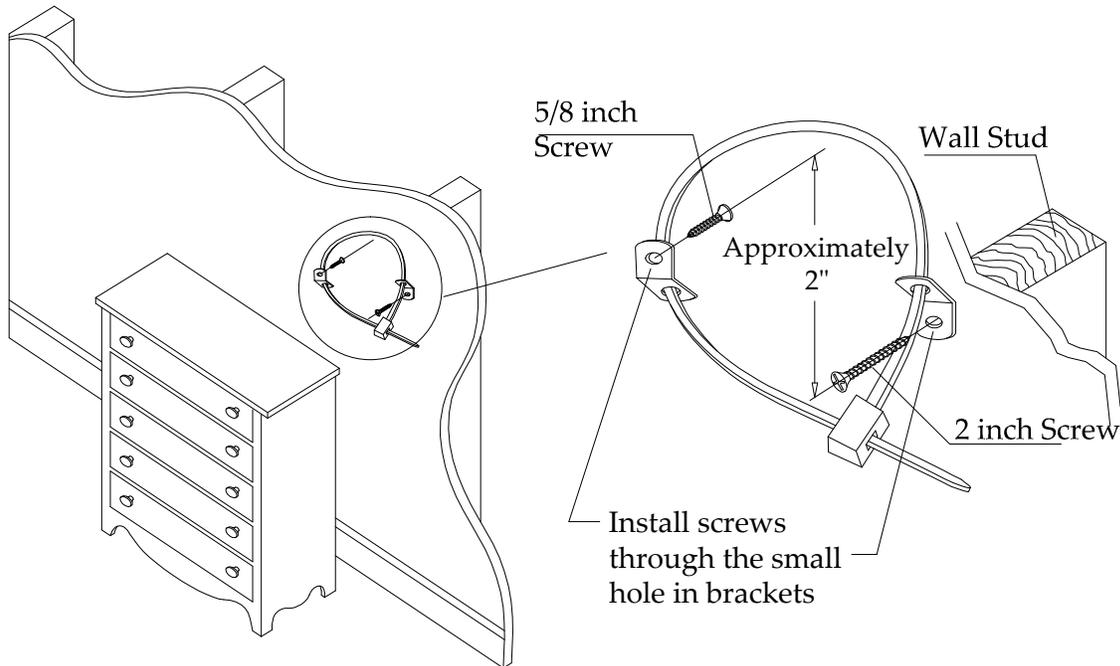

1. Temporarily locate the furniture to near it's final location in the room next to a wall. Locate a wall stud behind your furniture and also mark the stud's location on the back of your furniture.
2. Firmly attach one bracket to the stud approximately 2" below the top of the furniture with the **2 inch long** Wood Screws provided. It may be necessary to drill 3/32 dia. pilot holes for the screws.
3. Firmly attach the other bracket onto a solid, structural part on the back of the furniture using the **5/8 inch long** Wood Screws. It may also be necessary to pilot bore for these screws.
4. Move the furniture into its final position, taking care to line up the wall bracket with the furniture bracket. Thread a strap through the bracket as shown in the illustration. Tighten strap until snug but do not over tighten.

**Caution:** Riverside Furniture Corp. assumes no liability for improper installation or excessive loads placed on screws, brackets or straps. Failure to detach this restraint before moving furniture may result in personal injury and property damage.

**Warning:** This tip-over restraint is not to be a substitute for proper adult supervision. Do not allow children to climb on furniture. Items left on top of the TV and furniture, such as toys, remote controls and treats might tempt young children to climb. Push the TV as far back as possible from the front of its stand. Place electrical cords out of a child's reach, and teach children not to play with the cords.