 
 

 
 
 


 

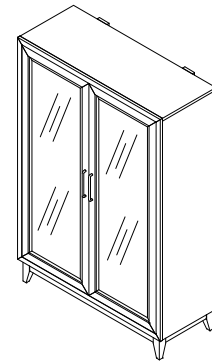


Components and Hardware List

<p>Leg</p>  <p>A 4 pcs.</p>	<p>Middle Support Leg</p>  <p>B 1 pc.</p>	<p>Leveler</p>  <p>C 5 pcs.</p>	<p>Wood Shelf</p>  <p>D 2 pcs.</p>
<p>Shelf Support</p>  <p>E 8 pcs.</p>	<p>M5/16" -18 x 2" Long Allen Head Bolt</p>  <p>F 8 pcs.</p>	<p>5/16" Spring Washer</p>  <p>G 8 pcs.</p>	<p>5/16" *19*2mm Flat Washer</p>  <p>H 8 pcs.</p>
<p>5mm Allen Wrench</p>  <p>I 1 pc.</p>	<p>Anti-tipping restraint kit</p>  <p>J 1 pc.</p>	<p>Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.</p>	

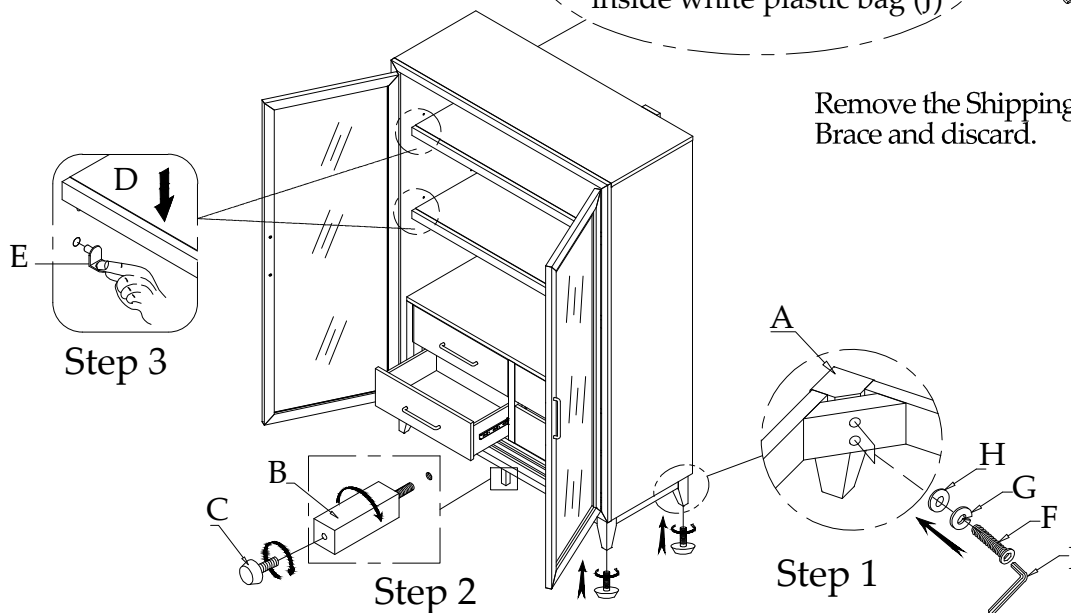


#46155
Display Cabinet

Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.

Anti-tipping Restraint Kit
inside white plastic bag (J)

Remove the Shipping
Brace and discard.



To prevent possible scratches and damage, this furniture must be assembled by two people on a soft surface such as a blanket or carpet.

Step 1: Carefully place the Display Cabinet on its back. Attach a Leg (A) underneath each corner using the 2" Long Allen Head Bolts (F), Spring Washers (G) and Flat Washers (H). Tighten using the Allen Wrench (I). Assemble a Leveler (C) into the bottom of the Legs.

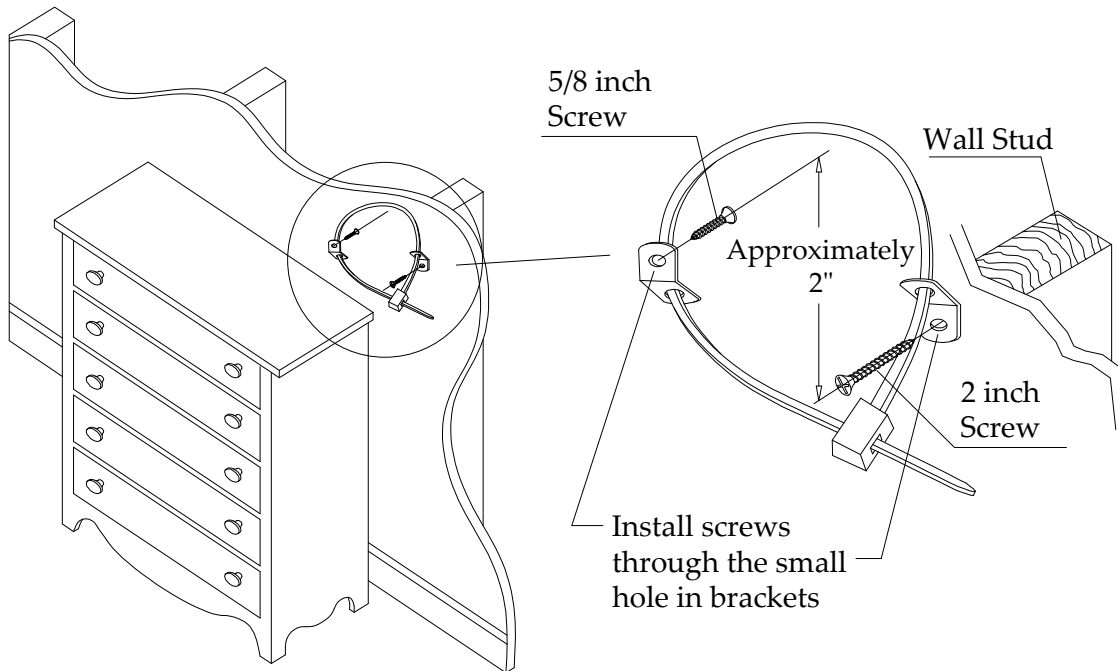
Step 2: Assemble a Leveler (C) into the Middle Support Leg (B) and attach the Leg to the bottom of the Cabinet. The Levelers can be adjusted to support the middle of the cabinet and adjust the door fit, if needed.

Step 3: Set the Cabinet upright. Using your Phillips Screwdriver, remove the screws attaching the shipping brace at the back and discard.

Step 4: Install the Shelf Supports (E) into the holes behind each door. Install the Wood Shelves (D) onto the Shelf Pins.

Anti-Tip Hardware Installation Instructions

Notice: Riverside Furniture Corp. recommends that steps be taken for certain furniture items to prevent or minimize the risk of tip-over. This furniture is equipped with Tip-over Restraint Hardware for use to minimize this risk, if used. Please follow below installation steps. Riverside Furniture Corp. recommends that parents and guardians periodically visit the U.S. Consumer Product Safety Commission (CPSC) website at <http://www.cpsc.gov/> and stay up to date on all issues related to children's product safety.



1. Temporarily locate the furniture to near it's final location in the room next to a wall. Locate a wall stud behind your furniture and also mark the stud's location on the back of your furniture.
2. Firmly attach one bracket to the stud approximately 2" below the top of the furniture with the **2 inch long** Wood Screws provided. It may be necessary to drill 3/32 dia. pilot holes for the screws.
3. Firmly attach the other bracket onto a solid, structural part on the back of the furniture using the **5/8 inch long** Wood Screws. It may also be necessary to pilot bore for these screws.
4. Move the furniture into its final position, taking care to line up the wall bracket with the furniture bracket. Thread a strap through the bracket as shown in the illustration. Tighten strap until snug but do not over tighten.

Caution: Riverside Furniture Corp. assumes no liability for improper installation or excessive loads placed on screws, brackets or straps. Failure to detach this restraint before moving furniture may result in personal injury and property damage.

Warning: This tip-over restraint is not to be a substitute for proper adult supervision. Do not allow children to climb on furniture. Items left on top of the TV and furniture, such as toys, remote controls and treats might tempt young children to climb. Push the TV as far back as possible from the front of its stand. Place electrical cords out of a child's reach, and teach children not to play with the cords.