

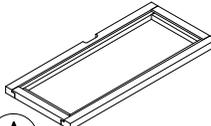
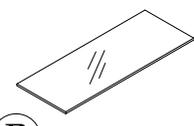


Components and Hardware List


| | | | |
|--|--|---|--|
| <p>Wood Shelf</p>  <p>(A) 3 pcs.</p> | <p>Glass Shelf</p>  <p>(B) 4 pcs.</p> | <p>Shelf Support</p>  <p>(C) 15 pcs.</p> | <p>Leveler (installed)</p>  <p>(D) 4 pcs.</p> |
| <p>Anti-tipping restraint</p>  <p>(E) 1 pc.</p> | <p>Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.</p> | | |

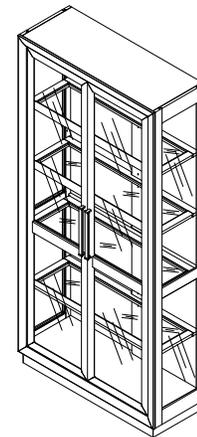

#50354
Display Cabinet

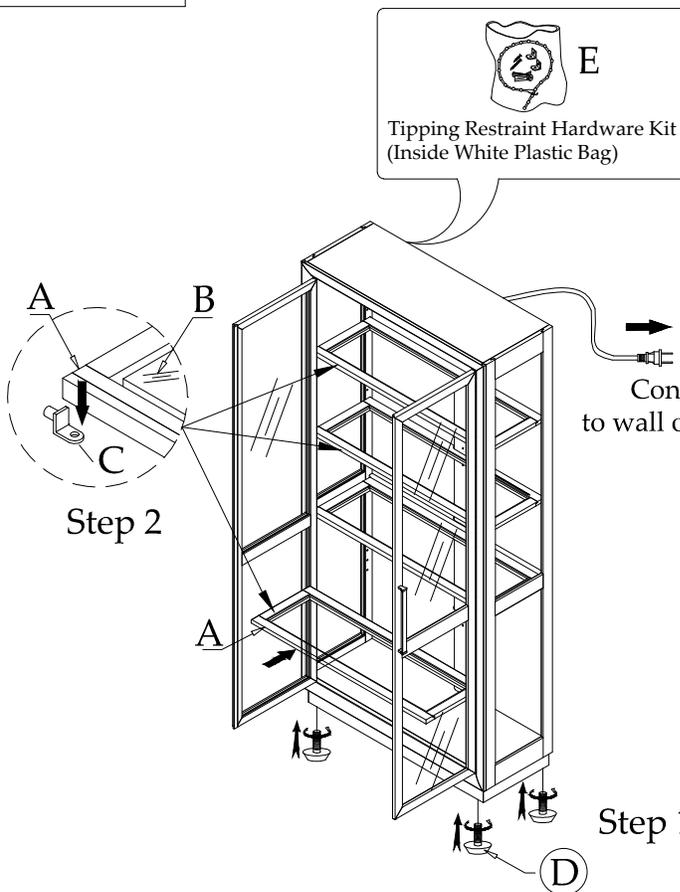

The Light installed in the top of the cabinet is controlled by a Touch Switch connected to the top hinge of the Right Hand Door.

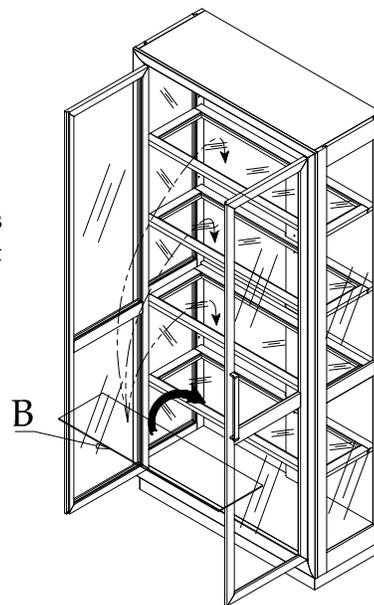


To prevent possible scratches and damage, this furniture must be assembled by two people on a soft surface such as a blanket or carpet.

Step 1: Place the Display Cabinet on its back and attach a Leveler (D) into the bottom of each corner, if not already installed. The levelers can be adjusted to compensate for uneven flooring and adjust the door fit, if necessary.

Step 2: The three Wood Shelf Frames (A) have been installed for shipping. These are secured using the screws underneath the shelf pins. In order to move the Shelves to a different location, using your Phillips Screwdriver, remove the screws and move the Shelf Pins and Shelves as desired.

Step 3: After moving the Display Cabinet to its final location in the room, install the Shelf Glass (B) into the four wood shelves.

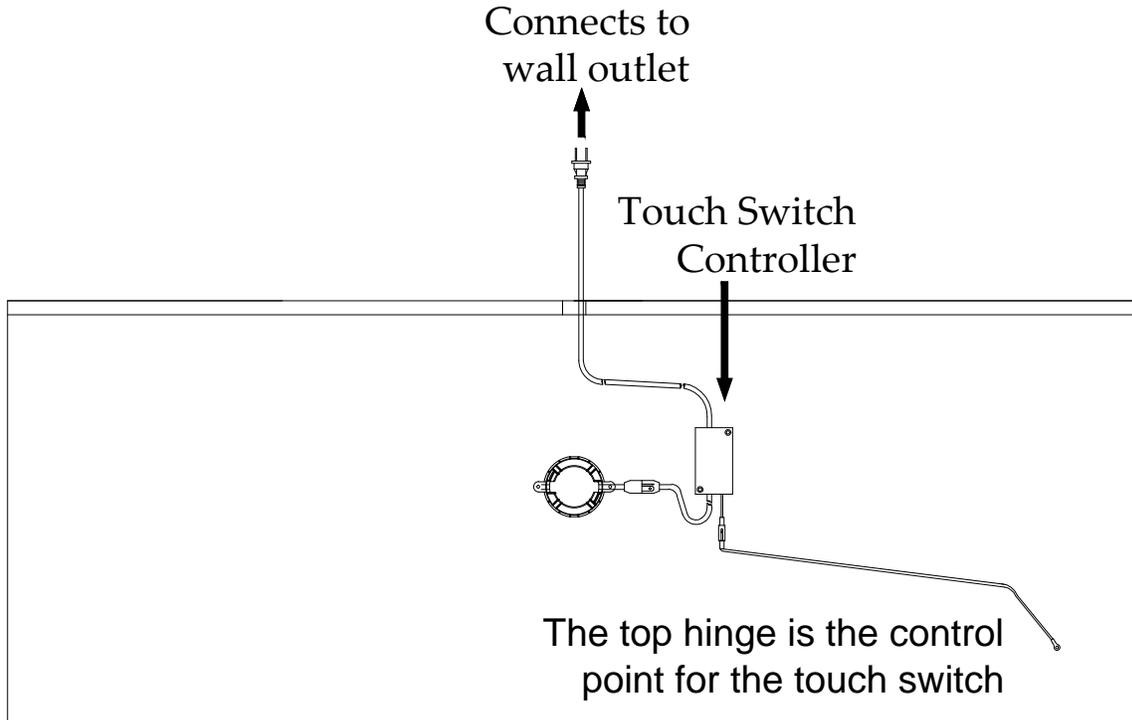

The light in this cabinet is a very energy efficient Light Emitting Diode (LED) fixture which is engineered to have a normal life expectancy of several years when used in a typical home.


The entire fixture set has been checked at the factory to verify operation. After connecting the power cord to a working electrical wall outlet, if the light fails to operate, the most common problem is probably a loose connection within the wiring. Verify that all wiring connections are secure.

The 'bulb' or LED contained within the fixture is not a replaceable component part within the light fixture. If required the fixture would need to be replaced.

If the light fails to operate after verifying power to the wall receptacle and checking all electrical wiring connections, contact Customer Service.

Anti-Tip Hardware Installation Instructions

Notice: Riverside Furniture Corp. recommends that steps be taken for certain furniture items to prevent or minimize the risk of tip-over. This furniture is equipped with Tip-over Restraint Hardware for use to minimize this risk, if used. Please follow below installation steps. Riverside Furniture Corp. recommends that parents and guardians periodically visit the U.S. Consumer Product Safety Commission (CPSC) website at <http://www.cpsc.gov/> and stay up to date on all issues related to children's product safety.

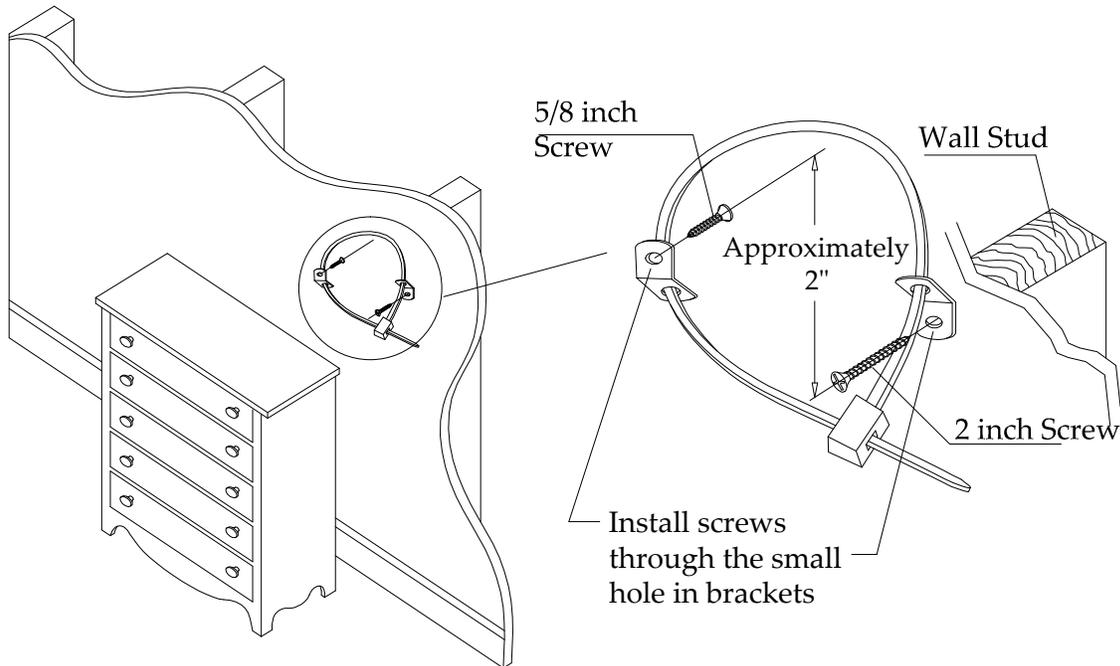

1. Temporarily locate the furniture to near it's final location in the room next to a wall. Locate a wall stud behind your furniture and also mark the stud's location on the back of your furniture.
2. Firmly attach one bracket to the stud approximately 2" below the top of the furniture with the **2 inch long** Wood Screws provided. It may be necessary to drill 3/32 dia. pilot holes for the screws.
3. Firmly attach the other bracket onto a solid, structural part on the back of the furniture using the **5/8 inch long** Wood Screws. It may also be necessary to pilot bore for these screws.
4. Move the furniture into its final position, taking care to line up the wall bracket with the furniture bracket. Thread a strap through the bracket as shown in the illustration. Tighten strap until snug but do not over tighten.

Caution: Riverside Furniture Corp. assumes no liability for improper installation or excessive loads placed on screws, brackets or straps. Failure to detach this restraint before moving furniture may result in personal injury and property damage.

Warning: This tip-over restraint is not to be a substitute for proper adult supervision. Do not allow children to climb on furniture. Items left on top of the TV and furniture, such as toys, remote controls and treats might tempt young children to climb. Push the TV as far back as possible from the front of its stand. Place electrical cords out of a child's reach, and teach children not to play with the cords.