Riverside

email: info@riverside-furniture.com


Finn Home Office Assembly Instructions

Page 2 of 2


Made in Viet Nam

28638 Uph Desk Chair

Step 4:

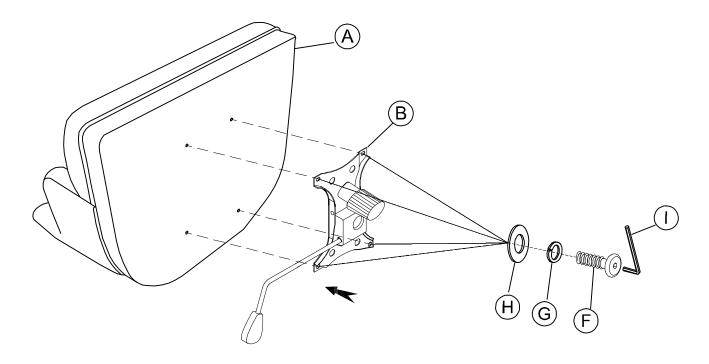

Step 5:

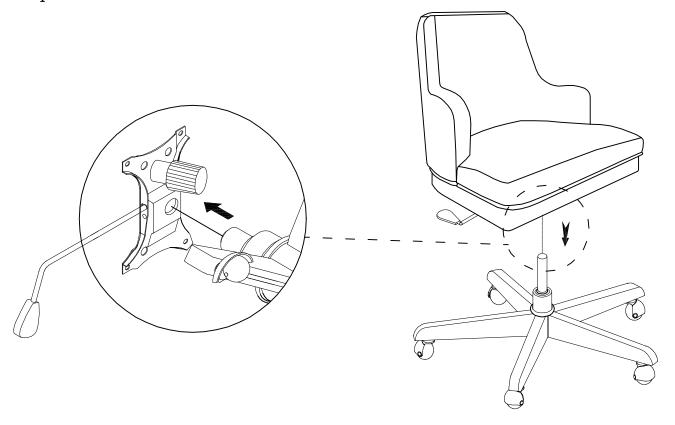

Note: To prevent possible damage to some types of flooring, never roll casters on unprotected hardwood or vinyl flooring. The lift mechanism is in a locked position for shipping .To unlock, pull straight out on the handle, and then the lift cylinder can be activated by lifting the handle.