

email: info@riverside-furniture.com

Davie Bedroom Assembly Instructions


Page 1 of 5

Made in Viet Nam

4/6-5/0 Queen Bed


Warning:

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture MUST BE ASSEMBLED BY TWO PEOPLE on a soft surface such as a blanket or carpet.

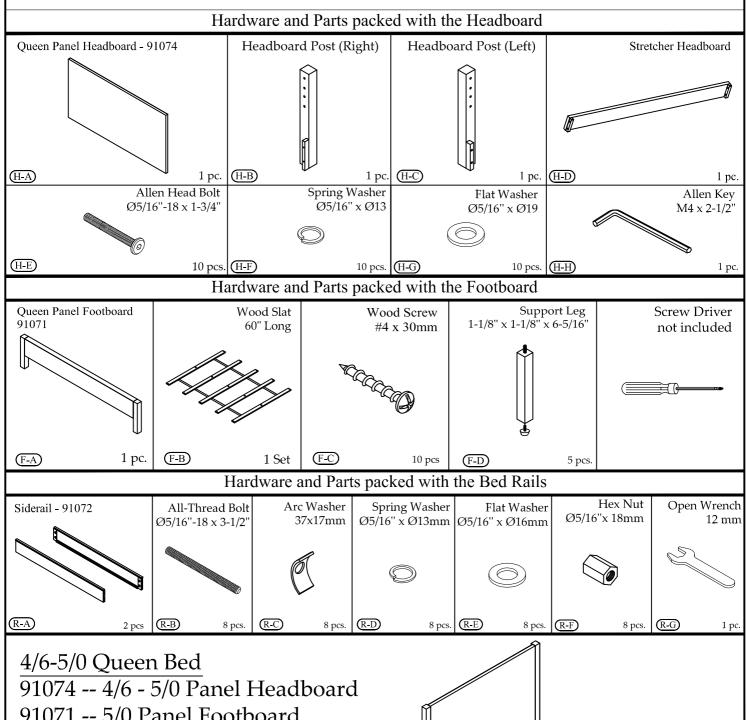

91071 -- 5/0 Panel Footboard

91072 -- 5/0 - 6/6 Siderails

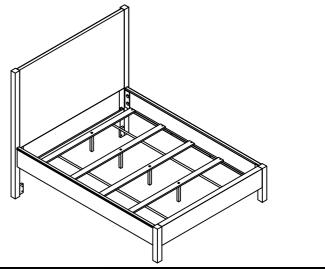

Riverside

Davie Bedroom Assembly Instruction

Page 2 of 5

Made in Viet Nam

FURNITURE


email: info@riverside-furniture.com


Bearoom

Assembly Instructions

Made in Viet Nam

4/6-5/0 Queen Bed

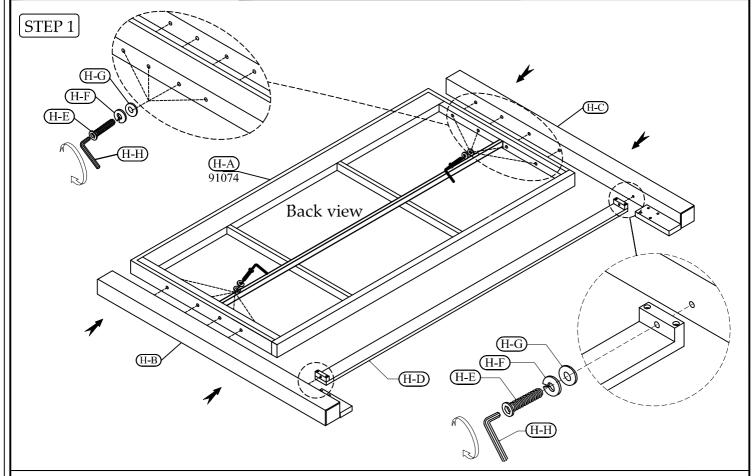

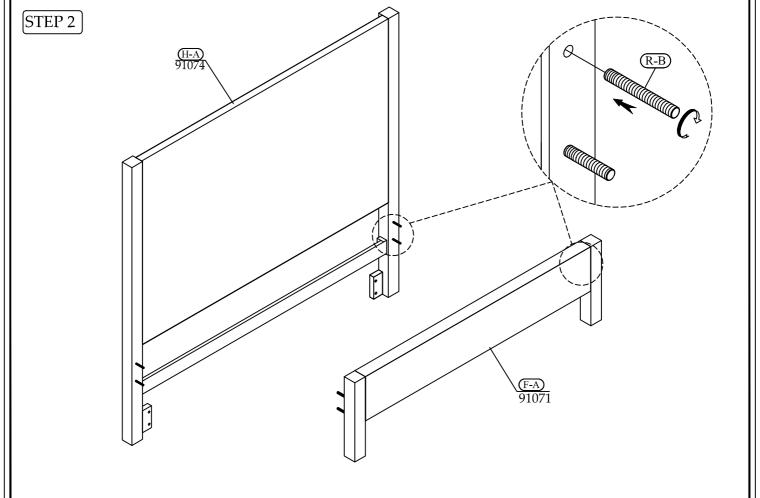


Riverside


email: info@riverside-furniture.com

Davie Bedroom Assembly Instructions

Page 3 of 5
Made in Viet Nam
4/6-5/0 Queen Bed

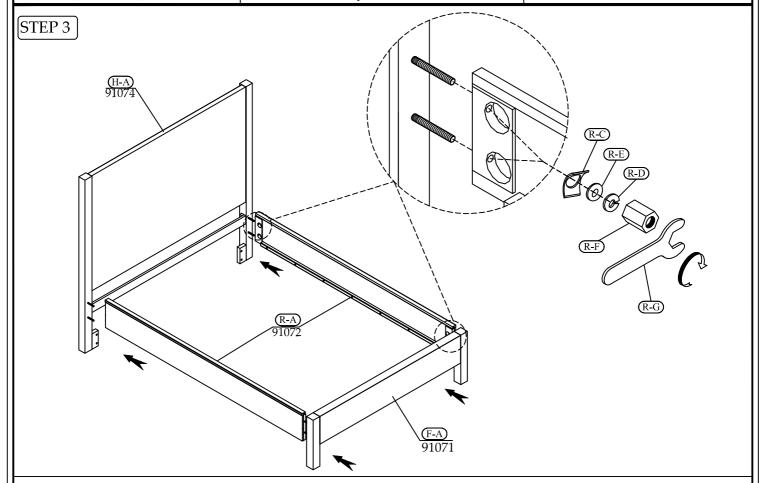



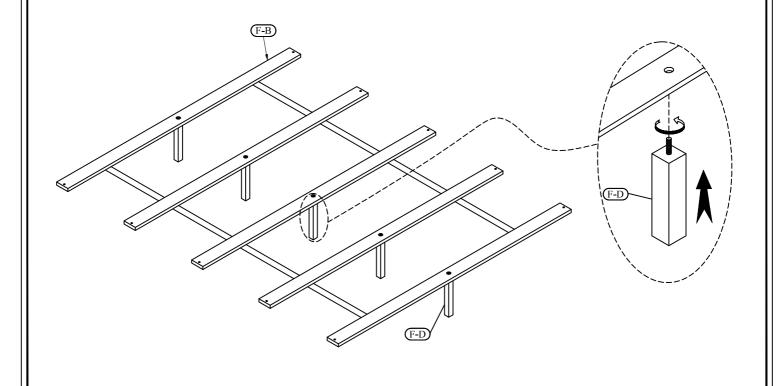



email: info@riverside-furniture.com


Davie Bedroom Assembly Instructions

Page 4 of 5

Made in Viet Nam

4/6-5/0 Queen Bed

STEP 5

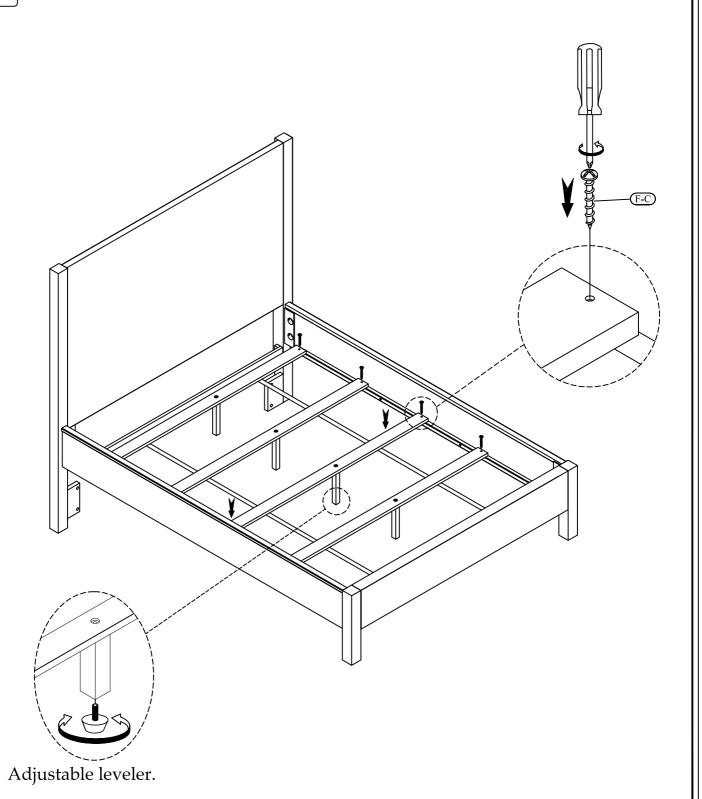



email: info@riverside-furniture.com


Davie Bedroom Assembly Instructions

Page 5 of 5

Made in Viet Nam

4/6-5/0 Queen Bed

4/6-5/0 Queen Bed 91074 - 4/6- 5/0 Panel Headboard

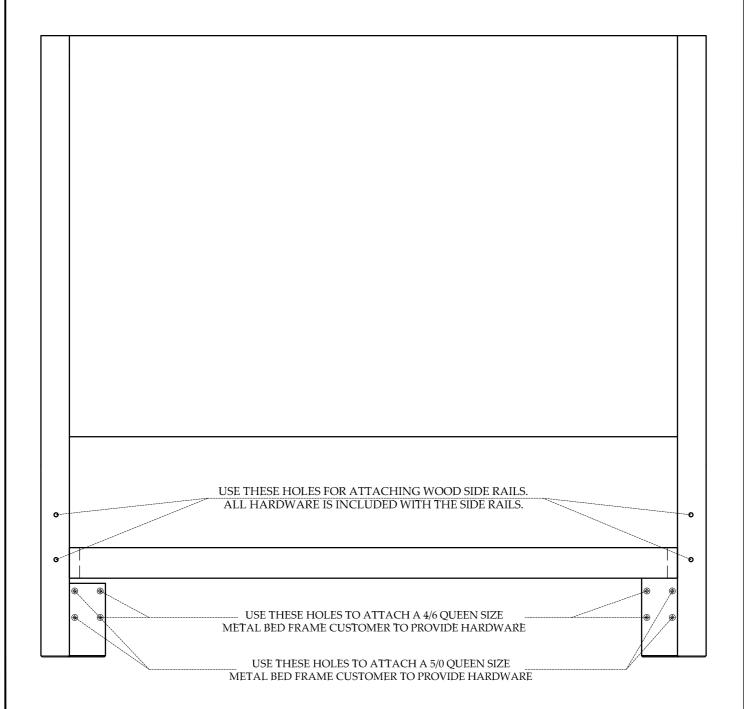

The headboard may be used alone with a Queen size metal bed frame.