


Components and Hardware List (for one chair)

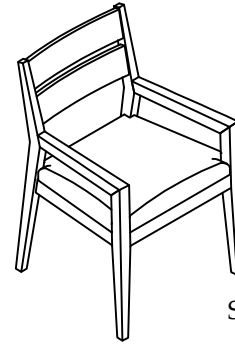

#12559
Slat Back Uph Arm Chair

Back

(A) 1 pc.

Seat

(B) 1 pc.

Front Legs

(C) 2 pcs.

Allen-Head Bolt
Ø8 x 40 mm

(H1) 1 pc.

Allen-Head Bolt
Ø8 x 55 mm

(H2) 4 pcs.

Allen-Head Bolt
Ø8 x 85 mm

(H3) 4 pcs.

Allen-Head Bolt
Ø6 x 40 mm

(H4) 2 pcs.

Lock Washer
Ø9 x Ø13 mm

(H5) 11 pcs.

Flat Washer
Ø8 x Ø20 mm

(H6) 9 pcs.

Flat Washer
Ø6 x Ø13 mm

(H7) 2 pcs.

4x110mm Allen Key

(H8) 1 pc.

Cover Cap
Ø14.2 x 7 mm

(H9) 2 pcs.

Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. To prevent possible scratches or damage, the chair should be assembled on a soft surface such as a blanket or carpet.

NOTE:

1. Do not fully tighten the bolts until the chair is completely assembled.
2. Set the chair upright on a flat surface to level the chair and then tighten all the bolts with the provided allen key.

