



Components and Hardware List


Ø1/4 -20 x 1-3/8
Long Allen-Head
Bolt




1/4" Spring
Washer




1/4" x 19mm x
2mm Flat Washer

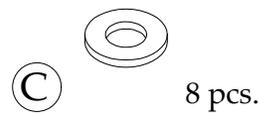

4mm Allen
Wrench

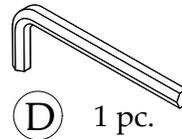

21461
21861
Mirror

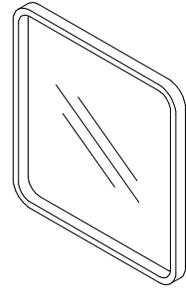



Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.

There are two different methods provided for using this Mirror.

Method One is using the Hanging Wire premounted to the back of the Mirror Frame and hanging on the wall.


Method Two is to mount the Mirror to the back of the Dresser using the Mirror Supports mounted with the Bolts and Washers provided.

Note: If using the Wire Hanger to mount the Mirror, to have a safe product, the mirror must be hung on the wall using the appropriate customer supplied hardware, being properly installed, capable of supporting the weight of the mirror and suitable for the wall material.

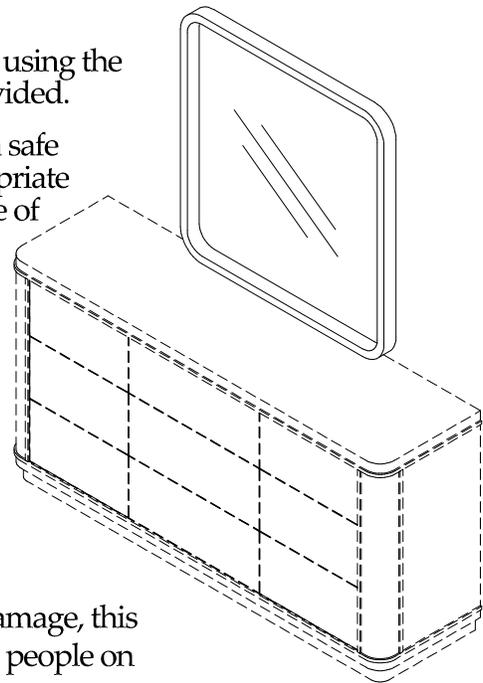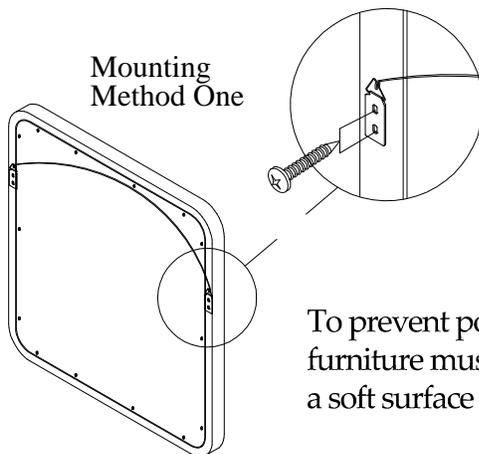

To prevent possible scratches and damage, this furniture must be assembled by two people on a soft surface such as a blanket or carpet.

Mounting
Method Two

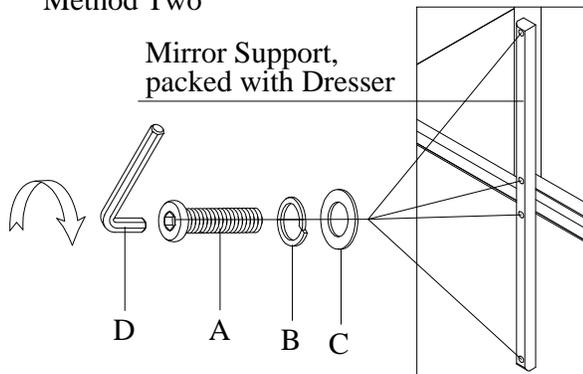

- Step 1. Using two people, carefully move the Dresser to be a few inches from the wall, near where it will be used.
2. Attach the Mirror Supports to the back of dresser with the Allen Head Bolts (A), Spring Washers (B) and Flat Washers (C) but do not fully tighten Bolts.
3. Place the Mirror onto the top back edge of the Dresser, against the Supports. Attach to the Supports using the same Bolts and Washers as in previous Step.
4. Tighten all Bolts using the Allen Wrench (D).
5. Carefully move the Dresser back to near the wall.