


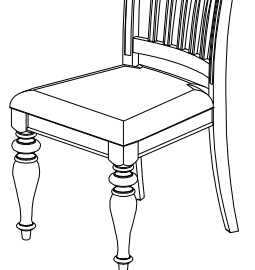








### Components and Hardware List (for one chair)

<p>M5/16" x 1 1/2" Allen Head Bolt</p>  <p>(A) 2 pcs.</p>	<p>M5/16" x 2" Allen Head Bolt</p>  <p>(B) 4 pcs.</p>	<p>M5/16" x 3" Allen Head Bolt</p>  <p>(C) 4 pcs.</p>	 <p>#36456 &amp; #36558 &amp; #36656 SIDE CHAIR UPHOLSTERY SEAT</p>
<p>5/16" Flat Washer</p>  <p>(D) 10 pcs.</p>	<p>5/16" Spring Washer</p>  <p>(E) 10 pcs.</p>	<p>5mm Allen Wrench</p>  <p>(F) 1 pc.</p>	
<p>Chair Back</p>  <p>(G) 1 pc.</p>	<p>Chair Seat</p>  <p>(H) 1 pc.</p>	<p>Front Leg</p>  <p>(I) 2 pcs.</p>	

Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Separate, count and check all parts against the Components and Hardware List above. Failure to use the correct length bolts in the proper locations may result in an unsafe product and could also cause damage to the parts being assembled.

**Step 1:** Place the Chair Back on a padded surface, and assemble the Chair Seat to the Chair Back (as shown in Step 1), using the 1-1/2" long Bolts (A), in the middle of the back, and the washers as shown. Install the 3" long Bolts (C), using the same washers, into the back corners of the Chair Seat. Do not fully tighten any bolts until after chair has been completely assembled.

**Step 2:** Assemble the Front Legs to the Chair Seat using the 2-1/2" long Bolts (B), and the same washers as before. Set the assembled Chair upright on a flat surface to level chair. Tighten all Bolts using the Allen Wrench.

