

email: info@riverside-furniture.com

## Forsyth Dining Assembly Instructions


## Made in Viet Nam

Page 1 of 1

## Warning:

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture must be assembled on a soft surface such as a blanket or carpet.

## Components and Hardware List Allen Head Bolt



Spring Washer  $\phi$ 5/16"

6




Flat Washer


Ø5/16"x19mm




4mm Allen




Allen Head Bolt

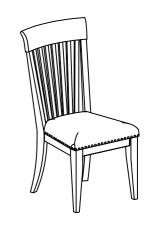



38257 Uph Slat Back Side Chair




Allen Head Bolt

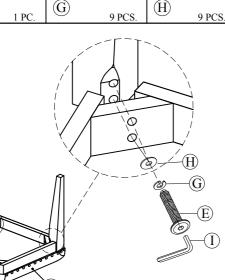



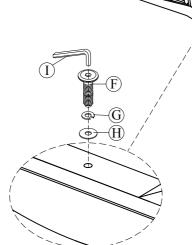

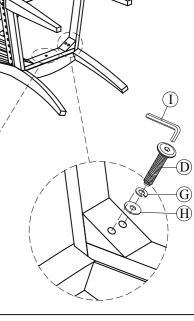

**COMPLETE** 

